

Cooking collection

Instructions for Use and Warranty Details

RH12 - 1200mm Island Canopy Rangehood

Congratulations on the purchase of your new appliance. This appliance has been designed and manufactured to give you years of reliable performance.

For best results, carefully read the instructions on how to install your new appliance. Correct installation will avoid delays and unnecessary service calls.

Once installation is complete, read this booklet carefully and get to know the controls and the features of your new appliance.

We reserve the right to alter the specifications with no influence on the operation of the appliance. This instruction manual cannot be reason for a claim.

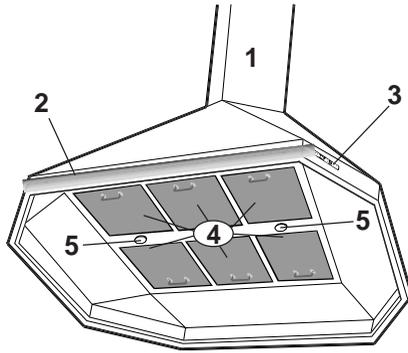


Fig. 1

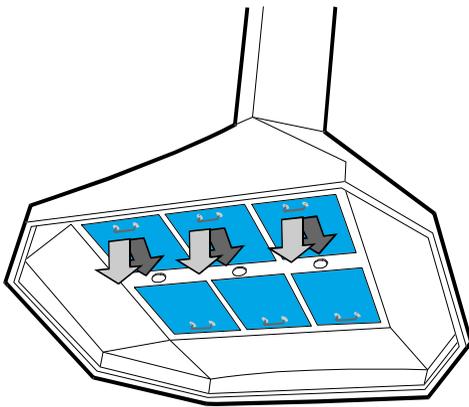


Fig. 2

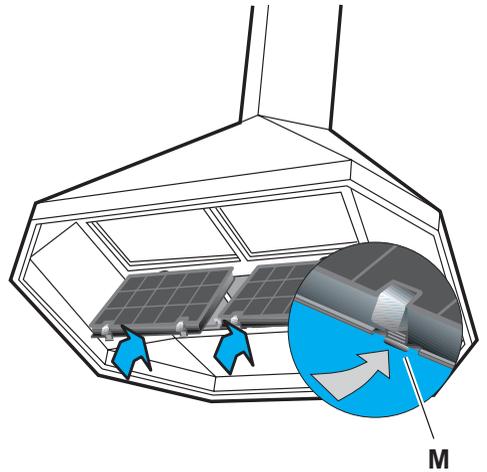


Fig. 3


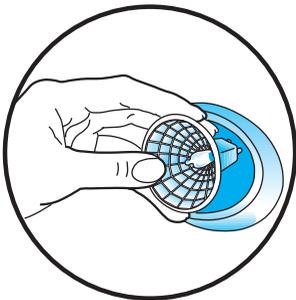


Fig. 4

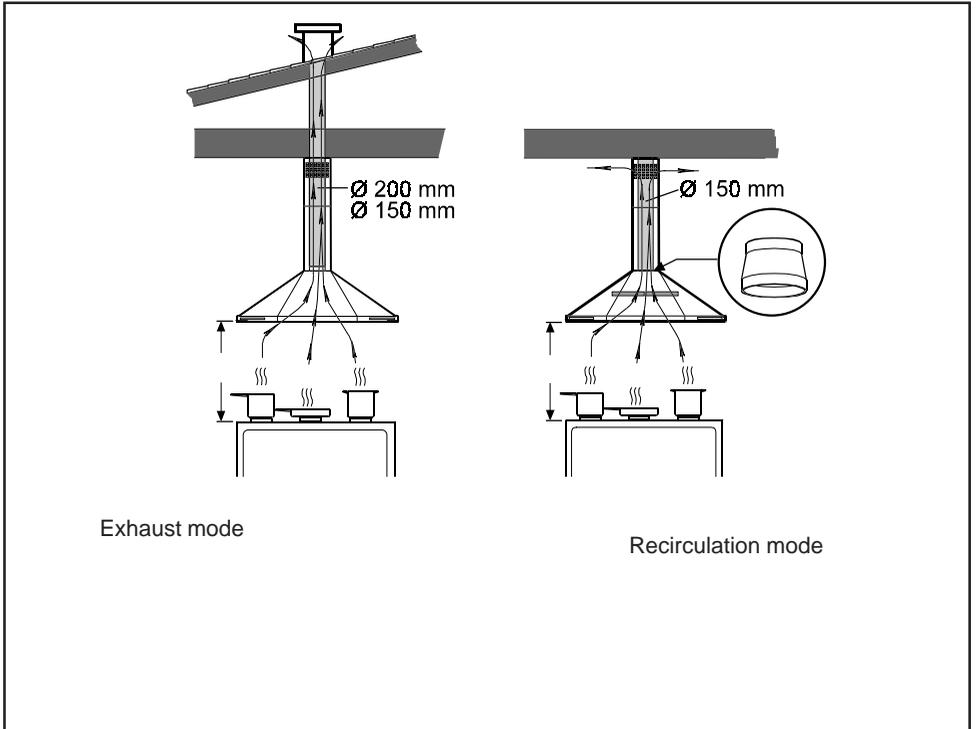



Key

- A: For extractor version
- B: Reference mark on the upper side of the telescopic structure, indicating the front of the hood (control panel on the right).
- C: Location for hood connection box.
- F: For filter version only.

How to calculate the **MAXIMUM ALLOWED** extension of the telescopic structure (operation 1):

- a) measure the distance (in millimeters) from the ceiling to the hob;
- b) subtract 1000 mm from this measurement for gas or combination hobs; for electric hobs subtract 1100 mm;
- c) the measurement obtained is the **MAXIMUM** extension of the telescopic structure.

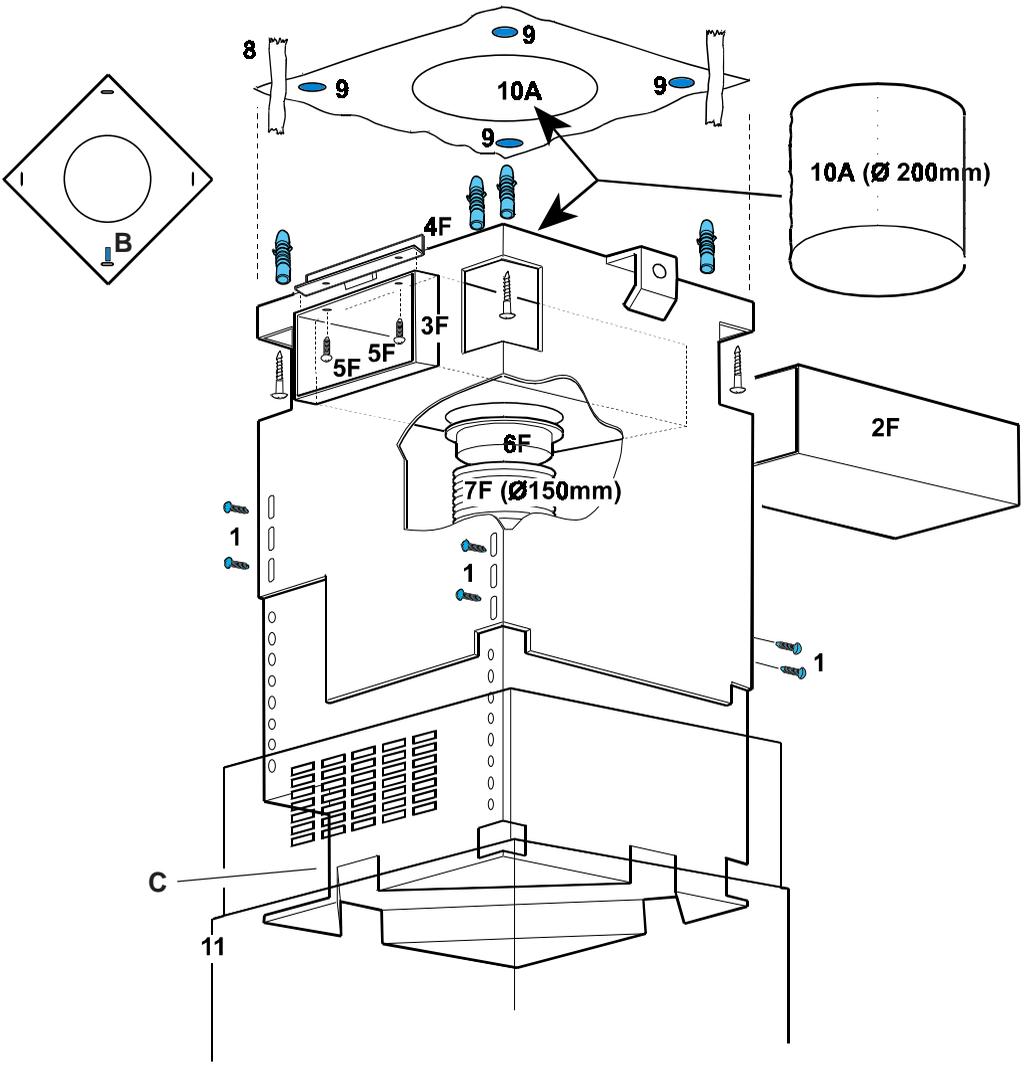

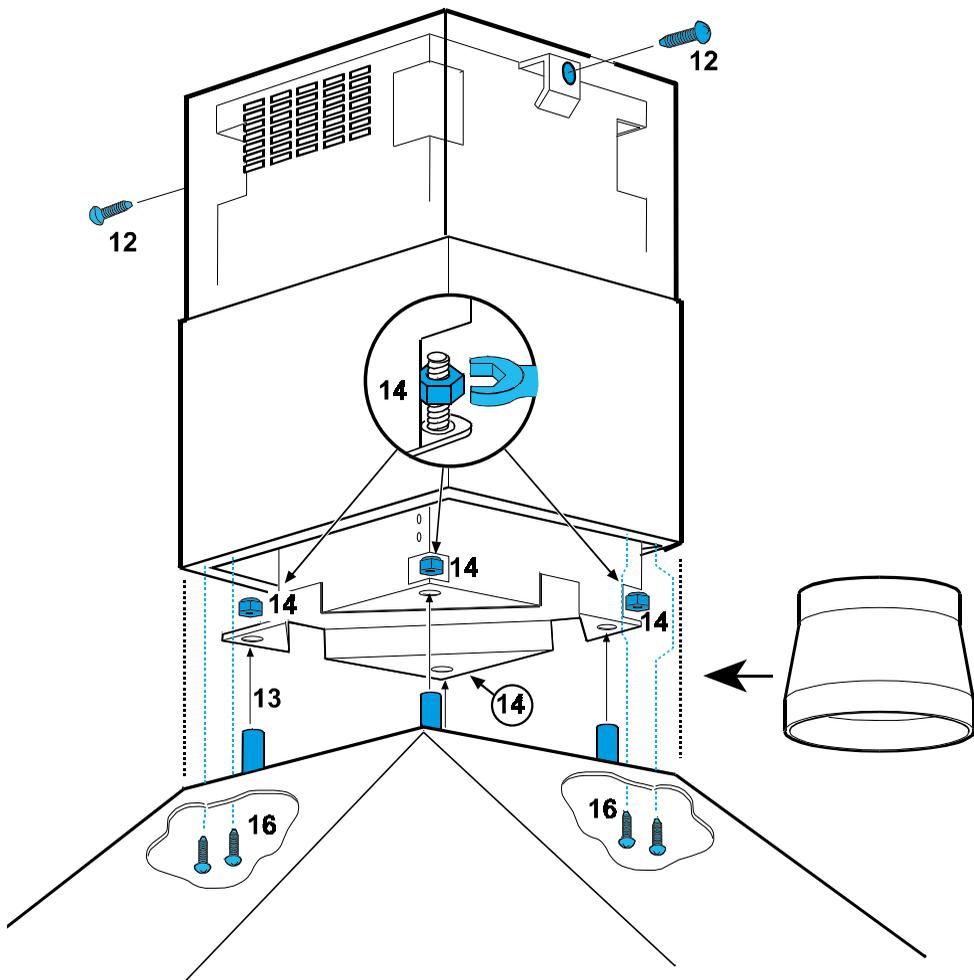

View of the hood - Fig. 1


- 1) Telescopic chimney
- 2) Kitchen utensil storage rail
- 3) Control panel
- 4) Metal grease filters
- 5) Halogen lamps

Use of the hood

It is advisable to switch on the extractor hood a few minutes before starting cooking and then to leave it running for approximately 5 minutes afterwards to ensure that all odours are extracted.

Use the slow speed in normal conditions and the fast speed with heavy fumes or odours.

Electronic control panel

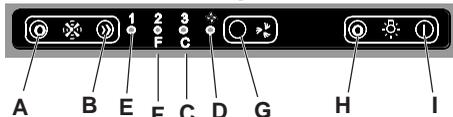

- A** – Motor OFF button
- B** – On button and motor speed selection button 1 - 2 - 3 - 1 - 2 -
- E** – Speed 1 LED
- F** – Speed 2 LED and metal grease filter saturation LED (flashes)
- C** – Speed 3 LED and carbon filter saturation LED (flashes)
- D** – Intensive speed LED
- G** – Intensive speed ON switch
This speed should be used when the concentration of cooking fumes or odours is particularly strong (for example when frying, cooking fish etc.). The fast speed will run for about 5 minutes and then return to the speed previously set automatically (1, 2 or 3), or switch off if no speed was selected. To turn off the fast speed, before the end of the 5 minutes, press button **A** or button **B**.
- H** – OFF lamp button
- I** – ON lamp button

If the hood fails to operate correctly, briefly disconnect it from the mains power supply for almost 5 sec. by pulling out the plug. Then plug it in again and try once more before contacting the Technical Assistance Service.

Maintenance

Before performing any maintenance operation, isolate the hood from the electrical supply by switching off at the connector and removing the connector fuse.

Or if the appliance has been connected through a plug and socket, then the plug must be removed from the socket.

Metal grease filter

This holds back suspended grease particles.

The metal grease filter lasts forever and must be washed either by hand or in the dishwasher (**65°C**) with suitable detergents.

Let the metal filter dry without damaging it before putting it back into place.

The metal grease filters must be washed at least once a month and anyhow whenever **the metal grease filter saturation led (Speed 2 LED) indicates the saturation of the filter.**

This LED warns you when the metal grease filter needs to be cleaned.

This LED flashes to warn you that the metal grease filters must be cleaned.

Generally, these must be cleaned after 40 hours of use.

Once the grease filters have been cleaned, press button **A** and button **H** at the same time for about two seconds until you hear the acoustic signal (beep): the grease filter saturation led **F** will now stop flashing.

To remove the metal grease filter, push the filter handle towards the centre and then downwards (Fig. 2).

Carry out the above steps in reverse order to put the filters back after having washed them.

Carbon filter

(“recirculation mode only”, see next pages)
The carbon filter cannot be washed nor regenerated.

The carbon filter should be replaced every 6 months under normal use and anyhow whenever **the carbon filter saturation led indicates the saturation of the filter.**

This LED indicates carbon filter needs to be replaced.

This led flashes to warn you that the carbon filter must be replaced.

This must be done after approximately 160 hours of use.

Once you have replaced the carbon filter, press button **A** and button **B** together for about two seconds (see page 10) until you hear the acoustic signal (beep).

The carbon filter saturation led **C** will now stop flashing.

N.B.: the carbon filter saturation led will also flash even if the hood is used in the exhausting version (i.e. without carbon filter).

To stop the led flashing, press the two buttons **A** and **B** as described above.

To fit the carbon filter - Fig. 3:

1. Remove the metal grease filters.
2. Insert the carbon filters in their seatings (back part first, then the front), fixing them in position using the two locking devices **M** (red buttons) supplied with each carbon filter.
3. Put the metal grease filter back into place.

To remove the carbon filter - Fig. 3:

To dismount the carbon filter, press the two buttons **M** and pull downwards.

Cleaning

To clean the outside of the hood use a cloth moistened with denatured alcohol or neutral liquid detergents. Never use products containing abrasive.

Wipe brushed stainless steel in the same direction as the brushing to avoid scratching.

Attention

Failure to observe the instructions for cleaning the appliance and changing and cleaning the filters may cause fires.

Therefore, we recommend observing these instructions.

Replacing the lamp - Fig. 4

- Unplug the appliance from the mains
- Remove the burnt lamp.
- Use only 20 W (max) halogen lamps.
- Fit the new lamp ensuring that the two male contacts of the lamp fit perfectly into the female contacts of the lamp holder.
- If the lighting is not operating, remember to check that the lamps are fitted correctly before calling your technician.

Warning!

- The hood cannot be connected to flues of other appliances that run on energy sources other than electricity.
- When the hood is used at the same time of other appliances that run on energy sources other than electricity, provision must be made for an adequate supply of air.
- No food must be cooked flambé underneath the hood.
The use of an unprotected flame is dangerous for the filters and could cause fires.
Therefore, never use an open flame under the hood. When frying foods, never leave the pan alone because the cooking oil could flare up.
- Please, keep to the provisions of official directives regarding the question of fume discharge.
- The manufacturers refuse to accept any responsibility for damage to the hood or its catching on fire because of failure to observe the above instructions.
- A constant maintenance guarantees a good operation and good performance of the unit.
- The best performance of the unit is obtained in the exhaust mode, therefore in the limits of the possibilities it is advised to use the cooker hood in this way.
- The best performances are obtained with short pipes and with few curves.
- In order to eliminate loss of heat towards the outside; in the winter period the unit can be used in the recycling (filtering) mode.
- In the event of fire, disconnect immediately the unit from the power supply remove the source of fire (pots, etc.).

Installation

When installed, the distance between hood and burners must be not less than 65 cm. above electric burners or 65 cm. above gas or mixed-fuel burners (Fig. 5, **H**).

The hood is fitted with wall plugs suitable for many types of ceilings.

In any case consult a qualified technician in order to know the rightness of tools according to the ceiling.

Electric connection

Before completing any connection, make sure the house voltage corresponds with the voltage indicated on the label affixed inside the hood. It is advisable to call a qualified technician to make the electrical connection.

Appliance fitted with plug.

Connect it to a socket which conforms with current regulations.

If you intend to connect it directly to the electric mains, remove the plug and fit an approved bipolar switch with a minimum contact opening of no less than 3mm.

If the plug is not accessible once it has been inserted in the socket, it will however be necessary to fit an approved bipolar switch with a minimum contact opening of no less than 3mm.

Appliance without plug

Fit an approved plug or an approved bipolar switch with a minimum contact opening of not less than 3mm.

The manufacturers are not liable for any problems caused by the user's failure to observe the above instructions.

Systems available

Two systems are available:

Exhaust mode

Vapours are extracted outside through an exhausting pipe (not supplied) that is affixed to the connection ring above the hood (Fig. 5).

Diameter of the exhausting pipe must be equal to that of the connection ring.

In the horizontal runs the duct must be slightly slanted (about 10°) and directed upwards to vent the air easily from the room to the outside.

Attention!

If the hood is supplied with carbon filter, then it must be removed.

Recirculation mode

(F - See the installation diagram)

The air is filtered through a carbon filter and recirculated into the room through the grid on the higher part of the chimney (Fig. 5).

Attention!

If the hood is not supplied with carbon filter, then it must be ordered and mounted.

WARRANTY AND SERVICE

DOMESTIC WARRANTY - FULL FIVE YEAR WARRANTY

In addition to all statutory rights which you, the Consumer, have under the relevant laws in respect of this appliance, during the first five years of ownership as the original purchaser of this Kleenmaid appliance, we guarantee that any fault caused by faulty material or workmanship becoming apparent will be rectified free of charge for parts and labour, provided that all service is performed during normal working hours by Kleenmaid or their designated Agents. Where the appliance is installed outside the normal servicing area of the above, the Purchaser must pay for the cost of transporting the appliance to and from the Agent or the Agent's travelling cost to and from the Purchaser's home.

COMMERCIAL WARRANTY - ONE YEAR WARRANTY

When this appliance is installed in a commercial application, you, the Consumer, have under the relevant laws in respect of this appliance, during your first one year of ownership as the original purchaser of this Kleenmaid appliance, we guarantee that any fault caused by faulty material or workmanship becoming apparent, will be rectified free of charge for parts and labour, provided that all service is performed during normal working hours by Kleenmaid or their designated Agents. Where the appliance is installed outside the normal servicing area of the above, the Purchaser must pay for the cost of transporting the appliance to and from the Agent or the Agent's travelling cost to and from the Purchaser's home.

WHAT THESE WARRANTIES DO NOT COVER

We are not responsible for any damage or malfunction unless caused by a defect in material or workmanship. This includes but is not limited to abuse, misuse, improper installation and transportation damage. We are not responsible for any consequential damages from any malfunction.

The Consumer must make the appliance available for servicing and shall bear any costs incurred for any de-installation and/or re-installation required to make the appliance available for servicing. Kleenmaid is not liable for any consequential damage incurred during de-installation or re-installation.

WARRANTY DOES NOT COVER REPLACEMENT OF LIGHT GLOBES OR GLASS BREAKAGE DUE TO IMPACT

In case of fractured glass do not use your appliance.

WARRANTY REGISTRATION

Please complete warranty details below and retain together with your proof of purchase document. These documents will need to be viewed by our Service Representative should you request in warranty service.

SERVICE ASSISTANCE

To assist you when phoning our After Sales Service number to arrange a service call please complete the following details and have them ready when you call.

Model Number _____ Date of purchase _____

Kleenmaid Store purchased from _____ Date of installation _____

KLEENMAID AFTER SALES SERVICE
1300 652 100

**Other products available in the Kleenmaid
Range of appliances**

Washers

Dryers

Dishwashers

Ovens

Cooktops

Outdoor Cooking Centres

Built In Espresso Coffee Machines

Rangehoods

Freestanding Ranges

Sinks

Waste Disposals

Taps

Cookware

Refrigerators

Freezers

Wine Cellars

Vacuum Cleaners

**For sales information on the full range of quality appliances
Phone 13 13 08**