

Cooking collection

Instructions for Use and Warranty Details

RH4X - 600mm Slide Away Rangehood








RH5X - 900mm Slide Away Rangehood





Congratulations on the purchase of your new appliance. This appliance has been designed and manufactured to give you years of reliable performance.

For best results, carefully read the instructions on how to install your new appliance. Correct installation will avoid delays and unnecessary service calls.

Once installation is complete, read this booklet carefully and get to know the controls and the features of your new appliance.

We reserve the right to alter the specifications with no influence on the operation of the appliance. This instruction manual cannot be reason for a claim.

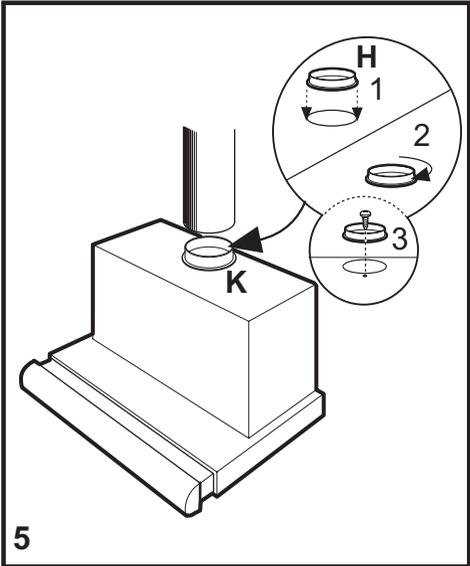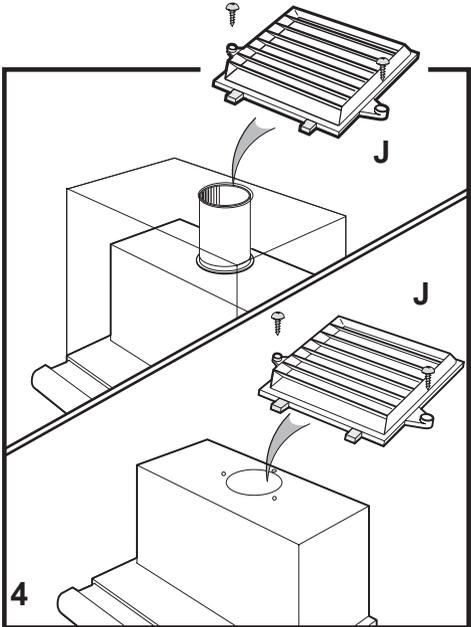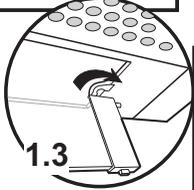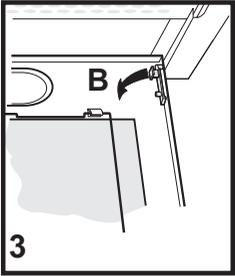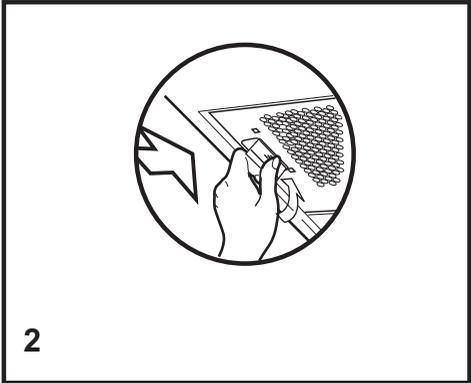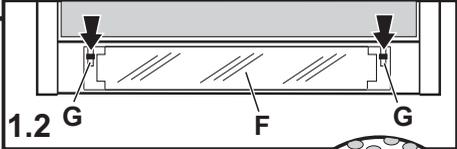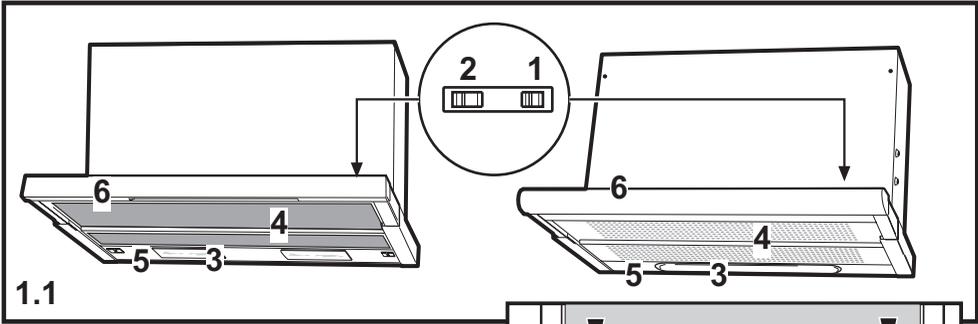

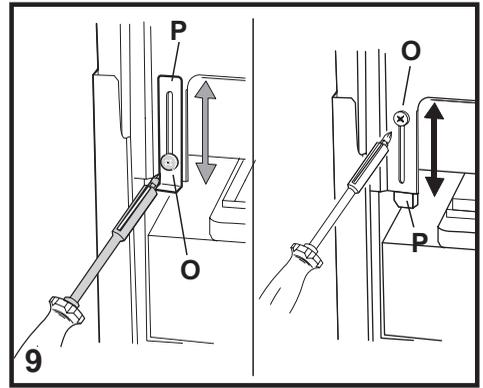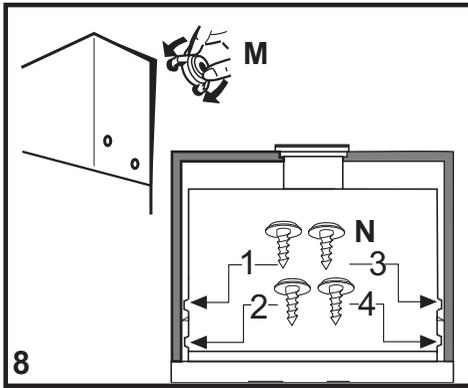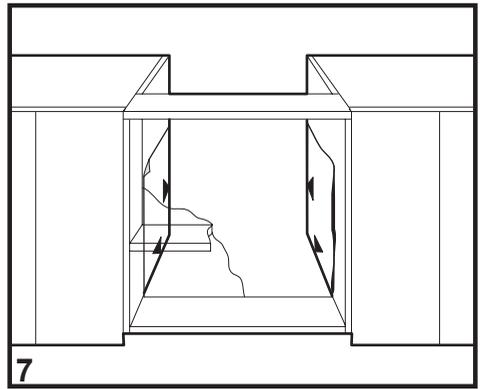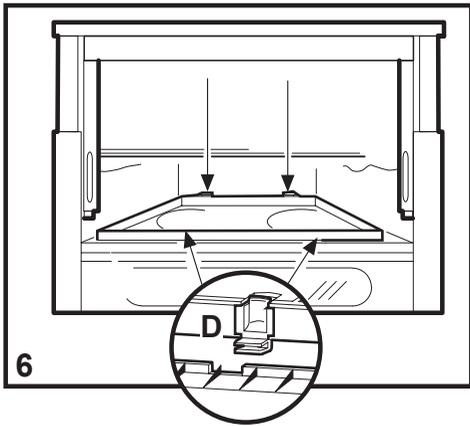

SAFETY WARNING

- Only qualified installers are authorised to carry out installation. The installer is responsible for commissioning the appliance in accordance with the current Australian standards and requirements under law.
- The appliance is intended solely for domestic use. The manufacturer shall not be held responsible for any accident that may be caused because of improper use.
- Switch off the power supply to the equipment before starting the installation.
- The plug to be connected to the power supply cable and the relative socket must be the same type and must comply with current Australian standards.
- After installing the appliance make sure that the plug is accessible to allow the periodical check-up.
- Always remember to remove all plastic protection before using the appliance.
- Before using the appliance we recommend reading this manual and all the warnings it contains thoroughly.
- In the event of a malfunction, do not attempt to repair the appliance. Disconnect the appliance from the mains and contact your nearest Kleenmaid service centre on 1300 652 100.
- Do not pull out the plug by pulling the cable.
- The appliance cannot be connected to flues of other appliances that run on energy sources other than electricity.
- When the appliance is used at the same time as other appliances that run on energy sources other than electricity, provision must be made for an adequate supply of air.
- The electric installation shall be equipped with a safety device, able to disconnect the appliance from mains in all wires, with the distance between contacts of not less than 3 mm in open position.
- No food must be cooked flambé underneath the appliance. The use of an unprotected flame is dangerous for the filters and could cause fires. Therefore, never use an open flame under the appliance.
- When frying foods, never leave the pan alone because the cooking oil could flare up.
- Please keep to current Local Building Standards regarding fume discharge.
- The identification plate, with the technical data, serial number and marking, can be found inside the appliance. The plate must never be removed.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Never allow children to come near the appliance or to play with it. Be careful not to leave objects on the appliance that may attract children's attention. Always keep children at a safe distance from the appliance.
- Discarded appliances must be delivered solely to a specialised waste collection centre.
- Switch off the power supply to the equipment before cleaning.
- Do not clean the surfaces of the appliance when they are still hot.
- Do not use pressure or steam spray guns to clean the appliance.
- Failure to clean the appliance and replace and clean the filters as described in this manual will generate a fire hazard. Please keep to the instructions given.

The manufacturer shall not be held responsible for any injury or damage that may be caused by failure to fully comply with the instructions and recommendations in this manual, the tampering of any of the appliance components or the use of non-original spares.

Introduction to the Rangehood - Fig. 1.1

1. Light Switch
2. Motor Speed Switch
3. Illumination of the cooking surface
4. Grease Filters/grease filter support grate
5. Light Cover Supports
6. Pull-Out Drawer

Metal Filters

Removing the Grease Filters

- a. Remove the pull-out drawer completely.
- b. Press the side handles (Fig. 2.3) towards the opposite side and remove the filters.

Putting the Filters Back in Place

- a. Remove the pull-out drawer completely and mount the grease filter so that it covers the drawer.
- b. Close the drawer and install the remaining grease filter.

Opening the Light Cover Support

- a. Remove the pull-out drawer completely.
- b. Move the hook locks (Fig 1.2) as indicated by the arrows and completely remove the lamp from the housing (Fig. 1.3).

Systems Available

Venting Outdoors

The air is vented outdoors through a duct which must be connected to the exhaust opening **K** (Fig. 5) by means of the flange **H**. The diameter of the exhaust duct must be exactly the same as that of the flange – 120mm.

Air Recirculation

- The air is cleaned by means of charcoal filters and then circulated back into the room.
- The use of a charcoal filter is necessary when the rangehood cannot vented outdoors either because ducting is not available or cannot be installed.

- The filtered air is returned from atop the cabinet through a duct that passes through the cabinet itself. The diameter of the duct must be the same as that of flange **H** (Fig. 5). The deflector **J** can be fixed to the outlet hole using the two screws provided (Fig. 4).

To fit or replace a carbon filter:

- a. Request a charcoal filter from the retailer, specifying the model and type of rangehood.
Caution! Some charcoal filters come covered with a plastic film to protect their filtering properties. If this is the case, remove the film before installing the filter.
- b. Remove the pull-out drawer completely.
- c. Remove the grease filters or the grates.
- d. Place the activated carbon filter in position. To assemble the filter, insert it in its seating and fix it in position using the clips (Fig. 7)
- e. Remove the grease filters or grills.

To remove the carbon filter, follow the procedure described above in the reverse order.

Installation

When installed, the distance between the rangehood and cooktop must be at least 650mm from gas, electric or mixed cooktops. Please confirm these measurements with your local gas, electrical and building authority.

Caution

This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the appliance. Do not use the rangehood where the grill is not correctly fixed! The suctioned air must not be conveyed in the same channel used for fumes discharged by appliances powered by other than electricity. The environment must always

be adequately aerated when the rangehood and other appliances powered by other than electricity are used at the same time. Flambé cooking with a rangehood is prohibited. The use of a free flame is damaging to the filters and may cause fire accidents, therefore free flame cooking must be avoided. Frying of foods must be kept under close control in order to avoid overheated oil catching fire. Carry out fumes discharging in accordance with the regulations in force by local laws for safety and technical restrictions.

The manufacturers refuse to accept any responsibility for damage to the rangehood or its catching on fire because of failure to observe the above instructions.

Electrical connection

The electrical tension must correspond to the tension noted on the label placed inside the rangehood. Connect the electrical plug, where provided, to the an easily accessible outlet in conformity with local standards in force.

Where an electrical plug is not provided (for direct connection to electrical network) place a standards approved bipolar switch with an aperture distance of not less than 3mm (accessible) from the contacts.

Mounting the Rangehood

The diameter of the ventilation duct must be the same as that of the flange mounted on the ventilation hole on the rangehood – 120mm.

To mount the rangehood proceed as follows:

- Position the drilling template inside the left cupboard on the right hand side with the arrow point towards the back on the cupboard (Fig. 8)
- Drill the holes marked on the template (Fig. 8)
- Repeat the procedure for the right hand cupboard

- If the sides of the cupboards are 18 mm thick, insert 4 spacers **M** on the sides of the rangehood (Fig. 9)
- Fix the rangehood to the cupboard using four screws **N** (Fig. 9).

Adjusting the Pull-Out Drawer

The rangehood can be installed beneath cabinets with varying depths.

Adjustments for opening and closing the drawer can be made based on your specific needs.

To adjust the drawer, remove the ventilation grates by loosening the **O** screws and adjusting the **P** brackets. Then retighten the **O** screws (Fig. 10).

Using the rangehood

The rangehood is provided with several speeds. For the best performance, we recommend using the low speeds in normal conditions and the high speeds when strong odour and vapour concentrations are present. We recommend starting the rangehood a few minutes before cooking and keeping it running for at least 15 minutes until all the odours have been eliminated.

Maintenance

Caution! Before performing any maintenance, disconnect the rangehood from the electrical supply.
Grease Filter

The metal filter has an unlimited life.

To remove the grease filter see instructions on Page 6.

Wash every month in warm soapy water, or, if possible, in the dishwasher (60°C). Let dry before reinstalling it.

PLEASE NOTE: The grease filter may discolour after washing in a dishwasher. This will not however affect the performance of the grease filter. Remount the filter after it has dried thoroughly.

Charcoal Filter

The charcoal filter serves to eliminate odours that form during the cooking process. Under normal use conditions, the filter should be replaced every 4 months. For replacement charcoal filters please contact your nearest Kleenmaid Store on 131308. The charcoal filter must never be washed.

To remove the charcoal filter follow the instructions on Page 6.

Replacing the Lamp

- a. Remove the pull-out drawer.
- b. Open the light cover support or the back grease filter support grate.
- c. Always replace burnt-out lamps with PL lamp 11 Watt. Close the light cover support.
- d. Before calling for customer service because the lighting system does not work, make sure that the lamps are screwed in tightly.
- e. Replacement lamps are not covered by warranty.

Cleaning

To clean the outside of the rangehood wipe with a soft cloth moistened with a mild liquid detergent. Never use products containing abrasives.

Attention!

Failure to observe the instructions for cleaning the appliance and changing and cleaning the filters may cause fires.

Therefore, we recommend observing these instructions.

NOTES

A series of 20 horizontal dotted lines for writing notes.

WARRANTY AND SERVICE

DOMESTIC WARRANTY - FULL FIVE YEAR WARRANTY

In addition to all statutory rights which you, the Consumer, have under the relevant laws in respect of this appliance, during the first five years of ownership as the original purchaser of this Kleenmaid appliance, we guarantee that any fault caused by faulty material or workmanship becoming apparent will be rectified free of charge for parts and labour, provided that all service is performed during normal working hours by Kleenmaid or their designated Agents. Where the appliance is installed outside the normal servicing area of the above, the Purchaser must pay for the cost of transporting the appliance to and from the Agent or the Agent's travelling cost to and from the Purchaser's home.

COMMERCIAL WARRANTY - ONE YEAR WARRANTY

When this appliance is installed in a commercial application, you, the Consumer, have under the relevant laws in respect of this appliance, during your first one year of ownership as the original purchaser of this Kleenmaid appliance, we guarantee that any fault caused by faulty material or workmanship becoming apparent, will be rectified free of charge for parts and labour, provided that all service is performed during normal working hours by Kleenmaid or their designated Agents. Where the appliance is installed outside the normal servicing area of the above, the Purchaser must pay for the cost of transporting the appliance to and from the Agent or the Agent's travelling cost to and from the Purchaser's home.

WHAT THESE WARRANTIES DO NOT COVER

We are not responsible for any damage or malfunction unless caused by a defect in material or workmanship. This includes but is not limited to abuse, misuse, improper installation and transportation damage. We are not responsible for any consequential damages from any malfunction.

The Consumer must make the appliance available for servicing and shall bear any costs incurred for any de-installation and/or re-installation required to make the appliance available for servicing. Kleenmaid is not liable for any consequential damage incurred during de-installation or re-installation.

WARRANTY DOES NOT COVER REPLACEMENT OF LIGHT GLOBES OR GLASS BREAKAGE DUE TO IMPACT

In case of fractured glass do not use your appliance.

WARRANTY REGISTRATION

Please complete warranty details below and retain together with your proof of purchase document. These documents will need to be viewed by our Service Representative should you request in warranty service.

SERVICE ASSISTANCE

To assist you when phoning our After Sales Service number to arrange a service call please complete the following details and have them ready when you call.

Model Number _____ Date of purchase _____

Kleenmaid Store purchased from _____ Date of installation _____

KLEENMAID AFTER SALES SERVICE

1300 652 100

**Other products available in the Kleenmaid
Range of appliances**

Washers

Dryers

Dishwashers

Ovens

Cooktops

Outdoor Cooking Centres

Built In Espresso Coffee Machines

Rangehoods

Freestanding Ranges

Sinks

Waste Disposals

Taps

Cookware

Refrigerators

Freezers

Wine Cellars

Vacuum Cleaners

**For sales information on the full range of quality appliances
Phone 13 13 08**

