

Cooking collection

Instructions for Use and Warranty Details

RH4 - 600mm Slide Away Rangehood









RH5 - 900mm Slide Away Rangehood







Congratulations on the purchase of your new appliance. This appliance has been designed and manufactured to give you years of reliable performance.

For best results, carefully read the instructions on how to install your new appliance. Correct installation will avoid delays and unnecessary service calls.

Once installation is complete, read this booklet carefully and get to know the controls and the features of your new appliance.

We reserve the right to alter the specifications with no influence on the operation of the appliance. This instruction manual cannot be reason for a claim.

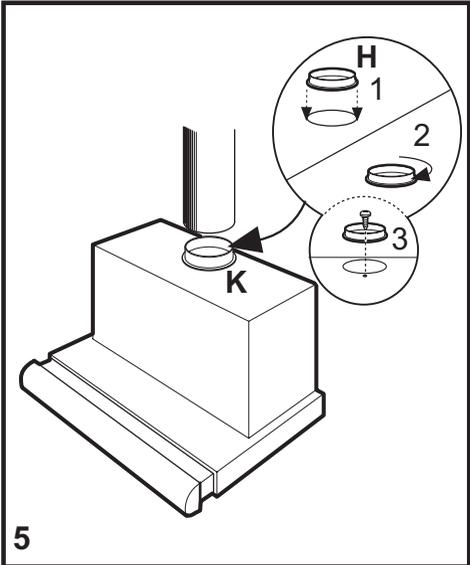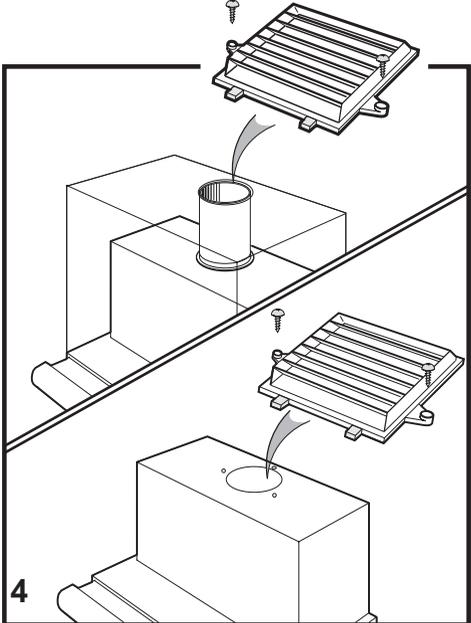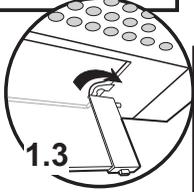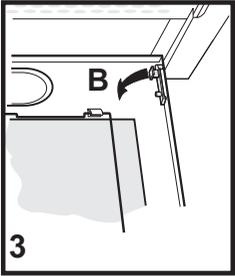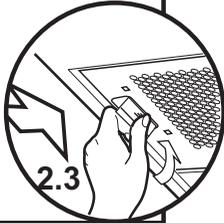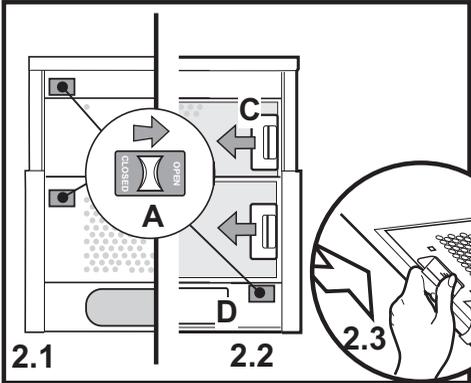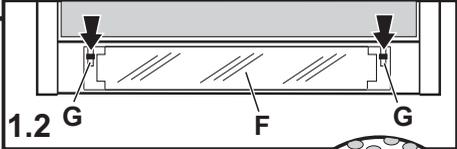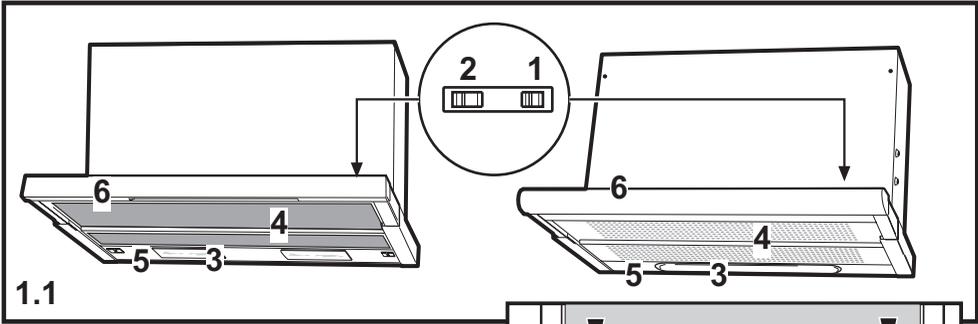

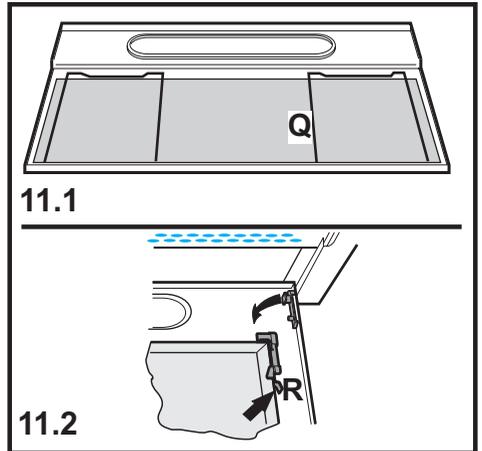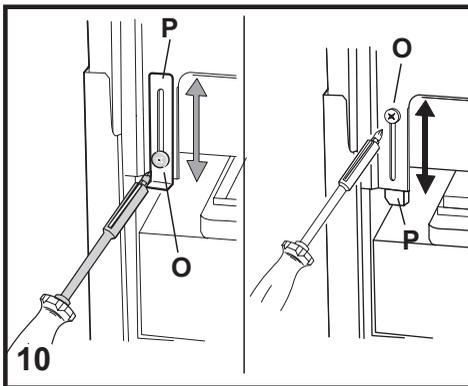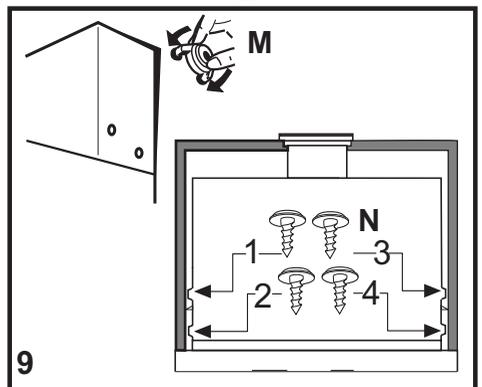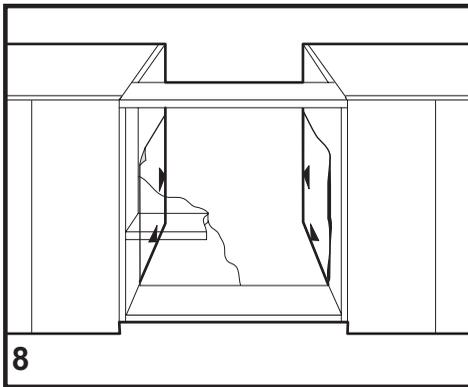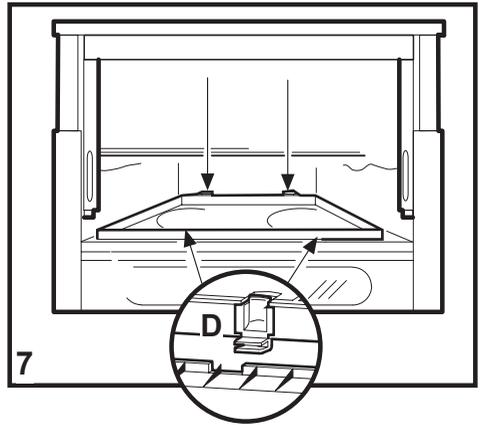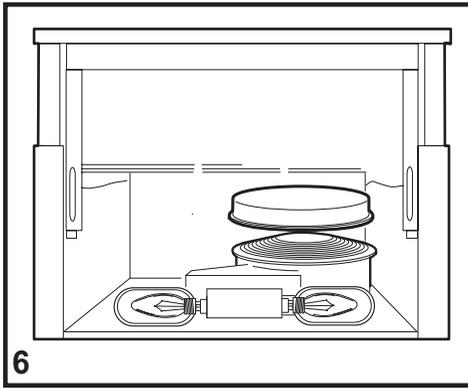

Introduction to the Hood - Fig. 1.1

1. Light Switch
2. Motor Speed Switch
3. Illumination of the cooking surface
4. Grease Filters/grease filter support grate
5. Light Cover Supports
6. Pull-Out Drawer

Model with Grease Filter Support Grate

Opening the Grease Filter Support Grates - Fig. 2.1

- a. Remove the pull-out drawer completely.
- b. Push the **A** knobs inwards toward each other (in the "Open" direction as indicated on the plastic knob itself).
- c. To remove the grates completely, use the **B** spring fasteners, which act as pins to hold the grate in place (Fig. 3).

Model with Self-supporting Metal Filters

Removing the Grease Filters - Fig. 2.2

- a. Remove the pull-out drawer completely.
- b. Press the side handles **C** (some models are supplied with handles **Z** - Fig. 2.3) towards the opposite side and remove the filters.

Putting the Filters Back in Place

- a. Remove the pull-out drawer completely and mount the grease filter so that it covers the drawer.
- b. Close the drawer and install the remaining grease filter.

Opening the Light Cover Support

- a. Remove the pull-out drawer completely.
- b. According to model in possession: Lamp **D** with hook locks type **A** - Fig. 2.2 Move the bracket hook locks towards each other (in direction "Open" as printed on the plastic part of the lock). Lamp **F** with hook locks type **G** - Fig. 1.2 Move the hook locks as indicated by the arrows and completely remove the lamp from the housing (Fig. 1.3).

Systems Available

Venting Outdoors

The air is vented outdoors through a duct which must be connected to the exhaust opening **K** (Fig. 5) by means of the flange **H**. The diameter of the exhaust duct must be exactly the same as that of the flange.

Air Recirculation

- The air is cleaned by means of charcoal filters and then circulated back into the room.
- The use of a charcoal filter is necessary when the hood cannot vented outdoors either because ducting is not available or cannot be installed.
- The filtered air is returned from atop the cabinet through a duct that passes through the cabinet itself. The diameter of the duct must be the same as that of flange

H (Fig. 5).

The deflector **J** can be fixed to the outlet hole using the two screws provided (Fig. 4).

To fit or replace a carbon filter:

- a. Request a charcoal filter from the retailer, specifying the model and type of hood.

Caution! Some charcoal filters come covered with a plastic film to protect their filtering properties. If this is the case, remove the film before installing the filter.

- b. Remove the pull-out drawer completely.
- c. Remove the grease filters or the grates.
- d. Place the activated carbon filter in position:
 - 1) Version with one motor: insert the filter in its housing over the plastic grill and rotate it until it locks in position (Fig. 6).
 - 2) Version with two motors: to assemble the filter, insert it in its seating and fix it in position using the clips **L** (Fig. 7)

- e. Remove the grease filters or grills

To remove the carbon filter, follow the procedure described in item 1) or 2), depending on the version) in the reverse order.

Installation

When installed, the distance between the hood and burners must be not less than 43 cm for electric burners or 65 cm for gas or mixed-fuel burners.

Caution

This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the appliance.

Do not use the cooker hood where the grill is not correctly fixed! The suctioned air must not be conveyed in the same channel used for fumes discharged by appliances powered by other than electricity. The environment must always be adequately aerated when the cooker hood and other appliances powered by other than electricity are used at the same time. Flambé cooking with a cooker hood is prohibited. The use of a free flame is damaging to the filters and may cause fire accidents, therefore free flame cooking must be avoided. Frying of foods must be kept under close control in order to avoid overheated oil catching fire. Carry out fumes discharging in accordance with the regulations in force by local laws for safety and technical restrictions. The manufacturers refuse to accept any responsibility for damage to the hood or its catching on fire because of failure to observe the above instructions.

Electrical connection

The electrical tension must correspond to the tension noted on the label placed inside the cooker hood. Connect the electrical plug, where provided, to the an easily accessible

outlet in conformity with local standards in force.

Where an electrical plug is not provided (for direct connection to electrical network) place a standards approved bipolar switch with an aperture distance of not less than 3mm (accessible) from the contacts.

Mounting the Hood

The diameter of the ventilation duct must be the same as the that of the flange mounted on the ventilation hole on the hood.

To mount the hood proceed as follows:

- Position the drilling template inside the left cupboard on the right hand side with the arrow point towards the back on the cupboard (Fig. 8)
- Drill the holes marked on the template (Fig. 8)
- Repeat the procedure for the right hand cupboard
- If the sides of the cupboards are 18 mm thick, insert 4 spacers **M** on the sides of the hood (Fig. 9)
- Fix the hood to the cupboard using four screws **N** (Fig. 9).

Adjusting the Pull-Out Drawer

The hood can be installed beneath cabinets with varying depths. Adjustments for opening and closing the drawer can be made based on your specific needs.

To adjust the drawer, remove the ventilation grates by loosening the **O** screws and adjusting the **P** brackets. Then retighten the **O** screws (Fig. 10).

Using the hood

The hood is provided with several speeds.

For the best performance, we recommend using the low speeds in normal conditions and the high speeds when strong odour and vapour concentrations are present.

We recommend starting the hood a few minutes before cooking and keeping it running for at least 15 minutes until all the odours have been eliminated.

Maintenance

Caution! Before performing any maintenance, disconnect the hood from the electrical supply.

Grease Filter

The grease filter serves to trap grease particles by suspending them.

1. **Synthetic Filter** (thickness: 10-15 mm): wash the filter in warm water and a biodegradable detergent once a month. Let dry without wringing. Replace after the filter has been washed 5 or 6 times.
2. **Thin Synthetic Filter** (approximately 1 mm thick): replace when the coloring from the top is visible on the bottom part.
3. **Thin Synthetic Filter** (approximately 1 mm thick - without saturation indicator) replace every two months.
4. **Metal Filter**: unlimited life; wash every month in

warm soapy water, or, if possible, in the dishwasher (60°C). Let dry before reinstalling it.

Removing the Grease Filters (for models with grease filter support grates)

To remove the dirty grease filter, proceed as follows:

- a. Remove the pull-out drawer completely and open the ventilation grates that support the grease filters.
- b. Remove the **Q** fasteners for the grease filter and remove it (Fig. 11.1). If special metal filters have been installed, press on the plastic springs **R** to unhook them (Fig. 11.2).
- c. When washing or replacing the grease filter, wash the grate as well with warm soapy water.
- d. Remount the new filter or the old one after it has dried thoroughly.

Charcoal Filter

The charcoal filter serves to eliminate odours that form during the cooking process. Under normal use conditions, the filter should be replaced every 4 months. It can be ordered from the retailer. The charcoal filter must never be washed.

To remove the charcoal filter, proceed as follows:

- a. Remove the pull-out drawer.
- b. Remove the grease filters and open the light cover support (or the grease filter support grate).
- c. Reverse the procedure described in item 1) or 2), depending on the version, of the "Air recirculation" paragraph.

Replacing the Lamp

- a. Remove the pull-out drawer.
- b. Open the light cover support or the back grease filter support grate.
- c. Always replace burnt-out lamps, according to what is provided for your appliance, with olive-shaped max. 40 Watt (E 14) bulbs, or neon-lamp 14 Watt max., or PL lamp 11 Watt (one PL lamp appliance) or PL 9 Watt (two PL lamp appliance).
- d. Close the light cover support or the back grease filter support grate.
- e. Before calling for customer service because the lighting system does not work, make sure that the lamps are screwed in tightly.

Cleaning

To clean the outside of the hood use a cloth moistened with denatured alcohol or neutral liquid detergents. Never use products containing abrasives.

Attention

Failure to observe the instructions for cleaning the appliance and changing and cleaning the filters may cause fires. Therefore, we recommend observing these instructions.

WARRANTY AND SERVICE

DOMESTIC WARRANTY - FULL FIVE YEAR WARRANTY

In addition to all statutory rights which you, the Consumer, have under the relevant laws in respect of this appliance, during the first five years of ownership as the original purchaser of this Kleenmaid appliance, we guarantee that any fault caused by faulty material or workmanship becoming apparent will be rectified free of charge for parts and labour, provided that all service is performed during normal working hours by Kleenmaid or their designated Agents. Where the appliance is installed outside the normal servicing area of the above, the Purchaser must pay for the cost of transporting the appliance to and from the Agent or the Agent's travelling cost to and from the Purchaser's home.

COMMERCIAL WARRANTY - ONE YEAR WARRANTY

When this appliance is installed in a commercial application, you, the Consumer, have under the relevant laws in respect of this appliance, during your first one year of ownership as the original purchaser of this Kleenmaid appliance, we guarantee that any fault caused by faulty material or workmanship becoming apparent, will be rectified free of charge for parts and labour, provided that all service is performed during normal working hours by Kleenmaid or their designated Agents. Where the appliance is installed outside the normal servicing area of the above, the Purchaser must pay for the cost of transporting the appliance to and from the Agent or the Agent's travelling cost to and from the Purchaser's home.

WHAT THESE WARRANTIES DO NOT COVER

We are not responsible for any damage or malfunction unless caused by a defect in material or workmanship. This includes but is not limited to abuse, misuse, improper installation and transportation damage. We are not responsible for any consequential damages from any malfunction.

The Consumer must make the appliance available for servicing and shall bear any costs incurred for any de-installation and/or re-installation required to make the appliance available for servicing. Kleenmaid is not liable for any consequential damage incurred during de-installation or re-installation.

WARRANTY DOES NOT COVER REPLACEMENT OF LIGHT GLOBES OR GLASS BREAKAGE DUE TO IMPACT

In case of fractured glass do not use your appliance.

WARRANTY REGISTRATION

Please complete warranty details below and retain together with your proof of purchase document. These documents will need to be viewed by our Service Representative should you request in warranty service.

SERVICE ASSISTANCE

To assist you when phoning our After Sales Service number to arrange a service call please complete the following details and have them ready when you call.

Model Number _____ Date of purchase _____

Kleenmaid Store purchased from _____ Date of installation _____

KLEENMAID AFTER SALES SERVICE
1300 652 100

**Other products available in the Kleenmaid
Range of appliances**

Washers

Dryers

Dishwashers

Ovens

Cooktops

Outdoor Cooking Centres

Built In Espresso Coffee Machines

Rangehoods

Freestanding Ranges

Sinks

Waste Disposals

Taps

Cookware

Refrigerators

Freezers

Wine Cellars

Vacuum Cleaners

**For sales information on the full range of quality appliances
Phone 13 13 08**