

Cooking collection

Instructions for Use and Warranty Details

RH60 - 600mm Fixed Rangehood

RH90 - 900mm Fixed Rangehood

Congratulations on the purchase of your new appliance. This appliance has been designed and manufactured to give you years of reliable performance.

For best results, carefully read the instructions on how to install your new appliance. Correct installation will avoid delays and unnecessary service calls.

Once installation is complete, read this booklet carefully and get to know the controls and the features of your new appliance.

We reserve the right to alter the specifications with no influence on the operation of the appliance. This instruction manual cannot be reason for a claim.

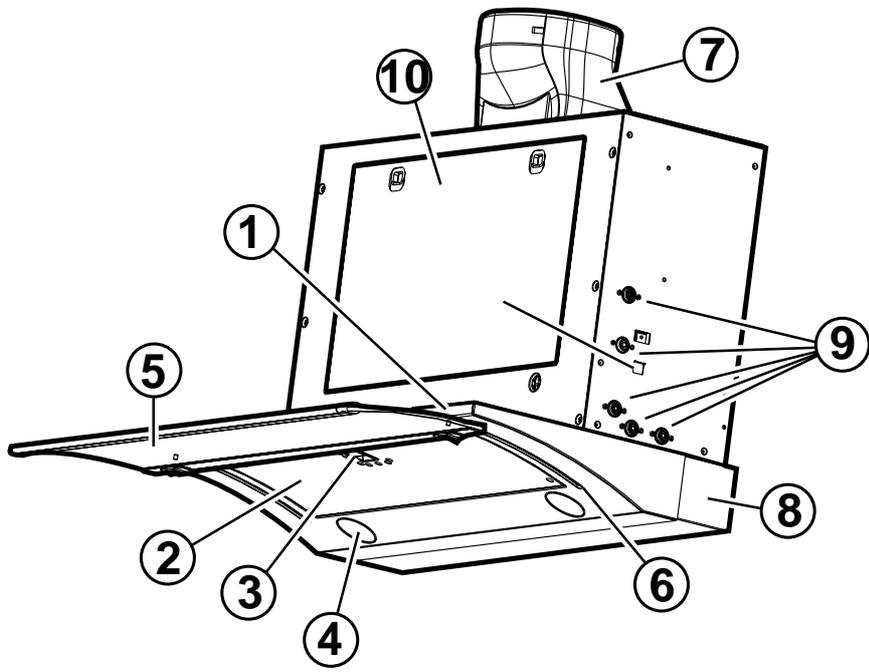


Fig. 1

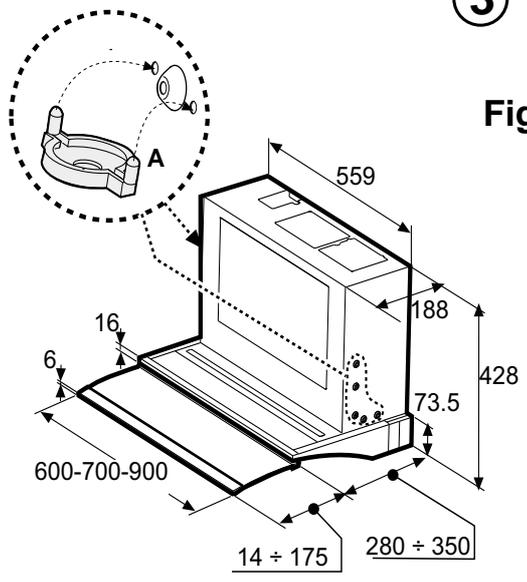
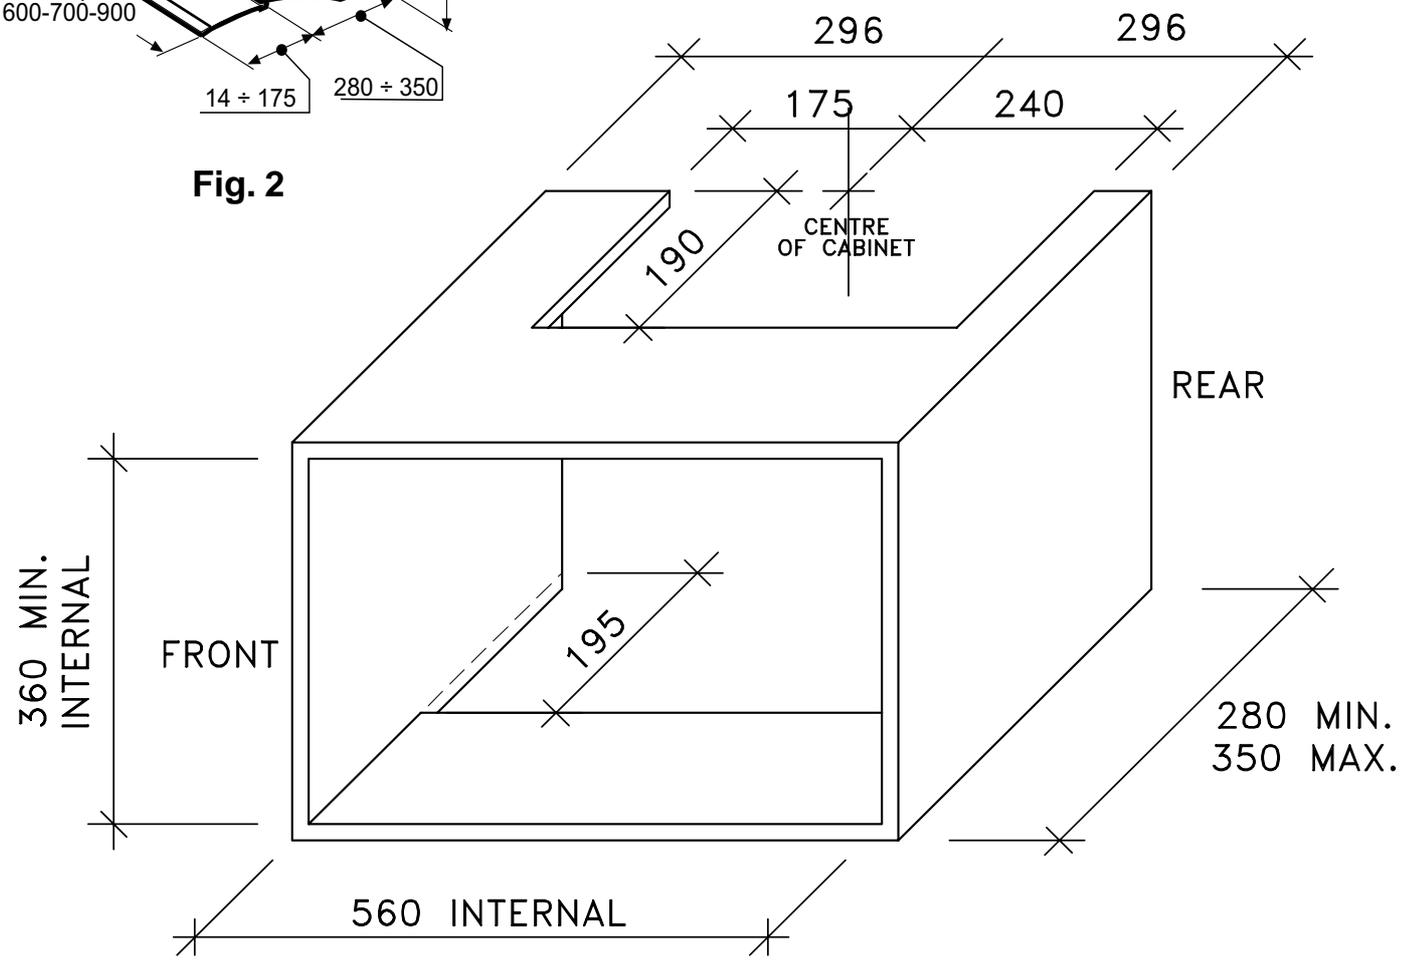


Fig. 2



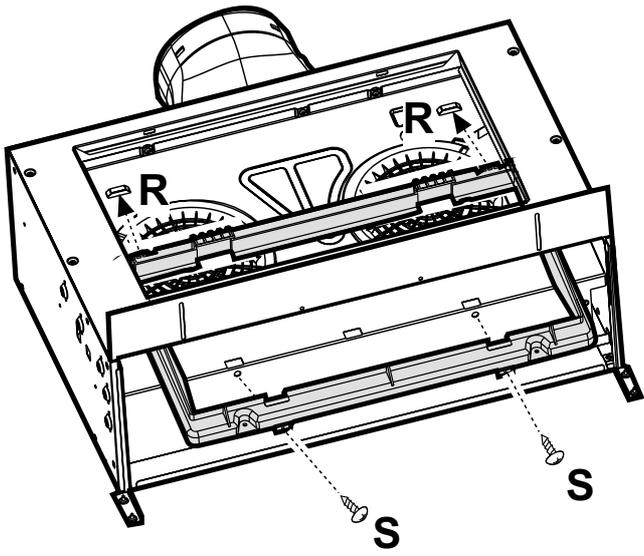


Fig. 3

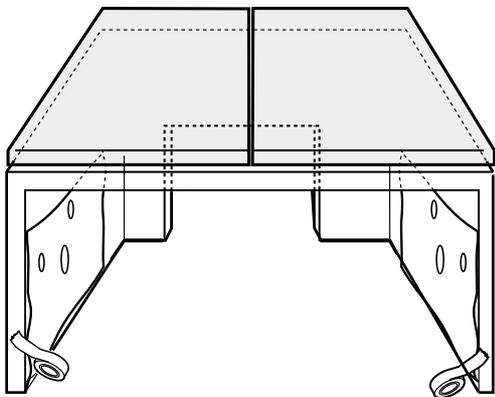
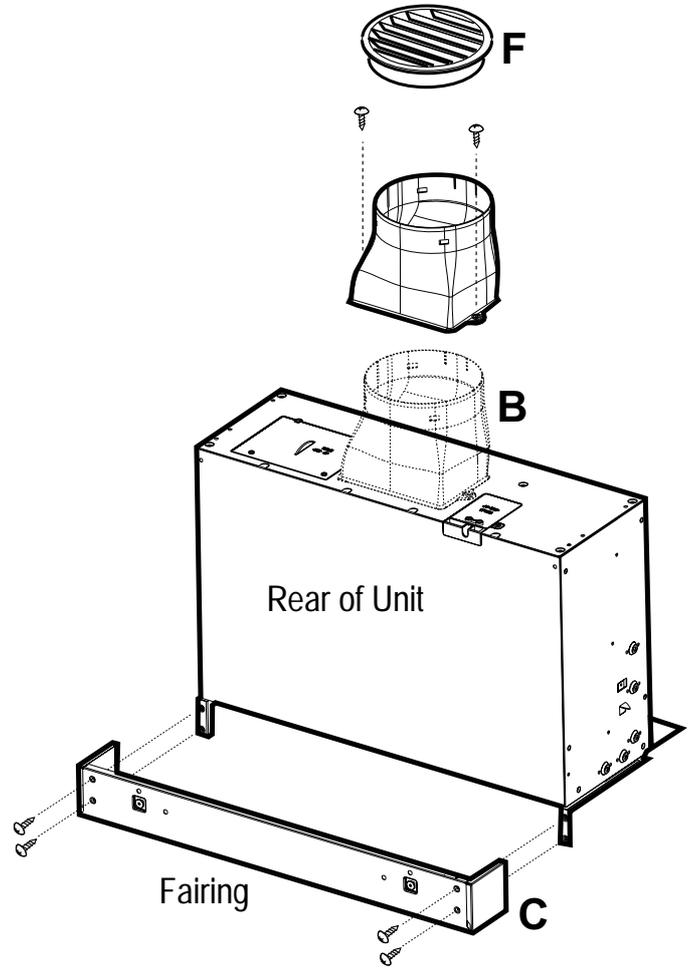


Fig. 4

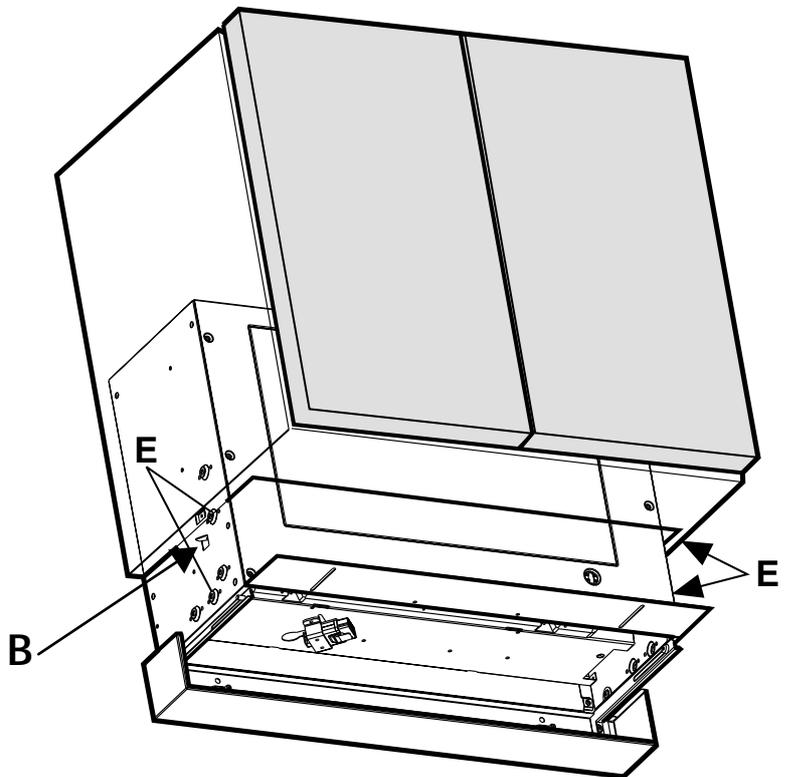


Fig. 5

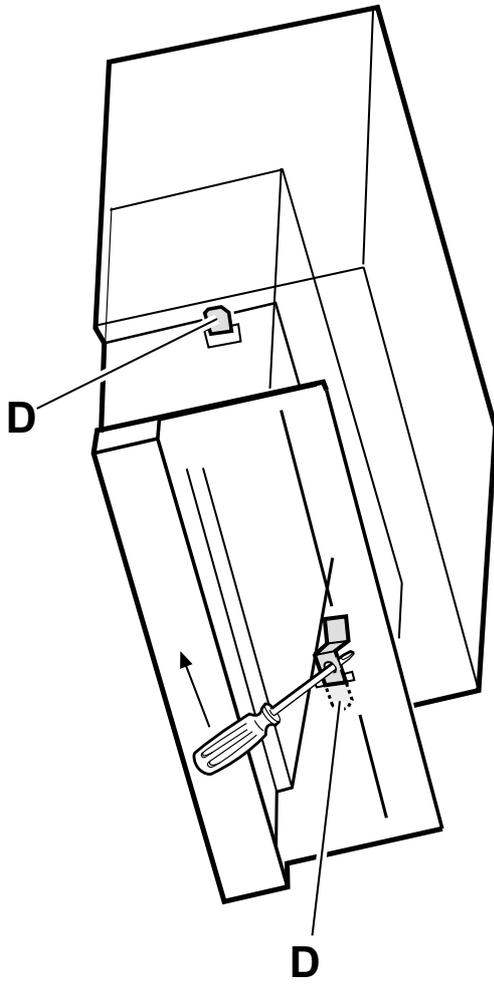


Fig. 6

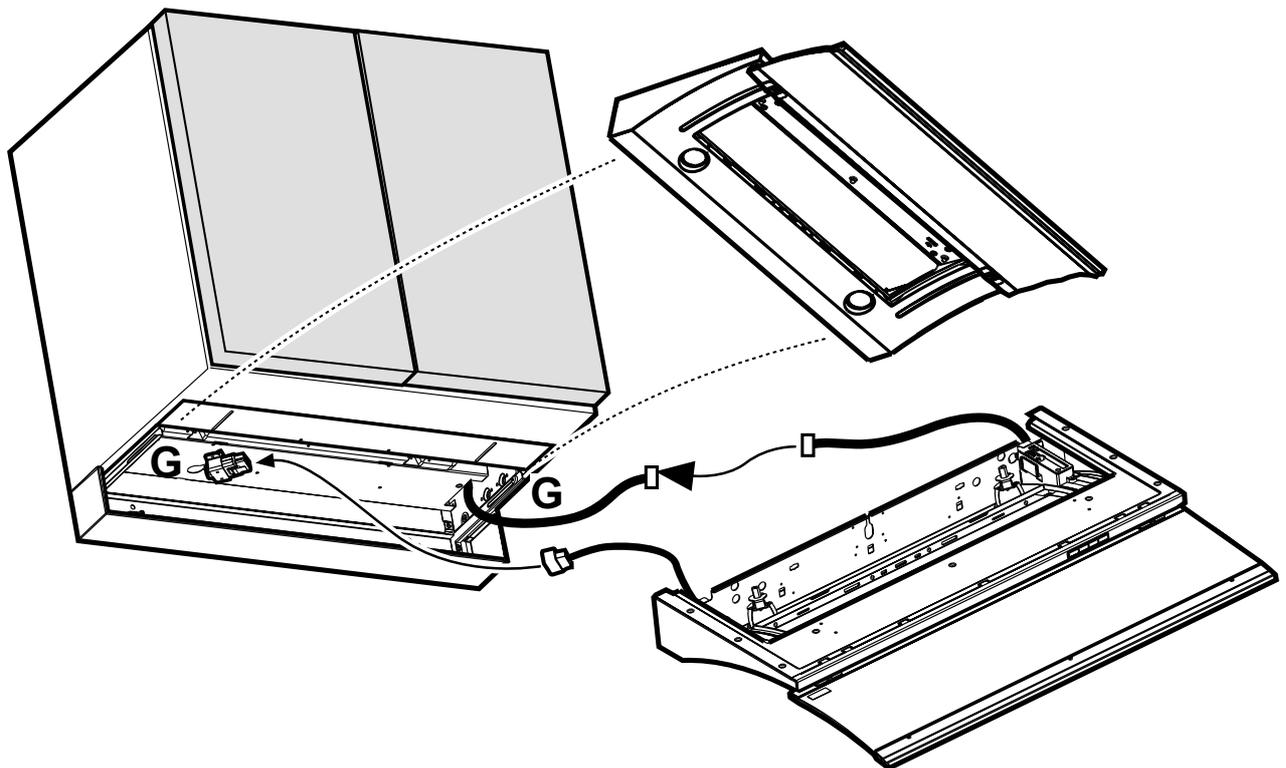


Fig. 7

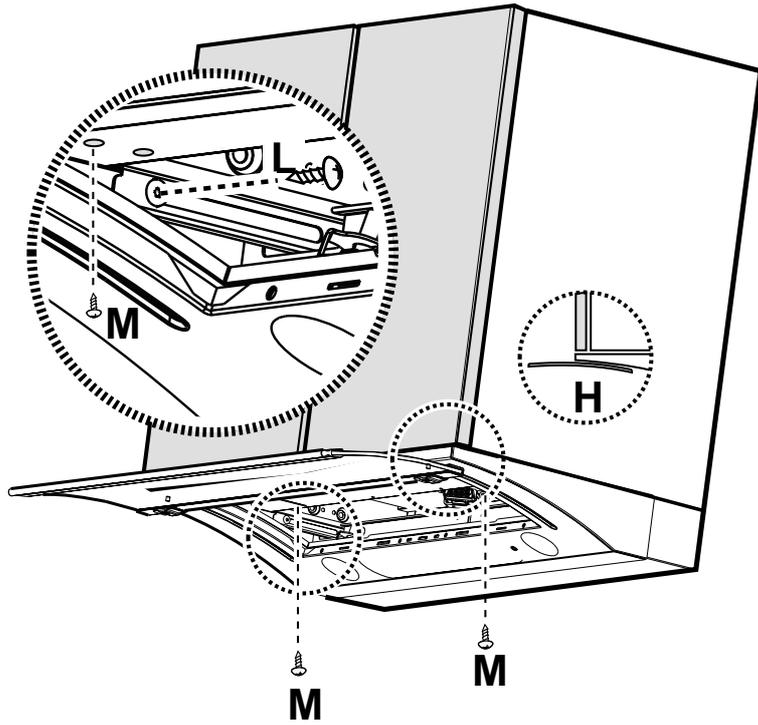


Fig. 8

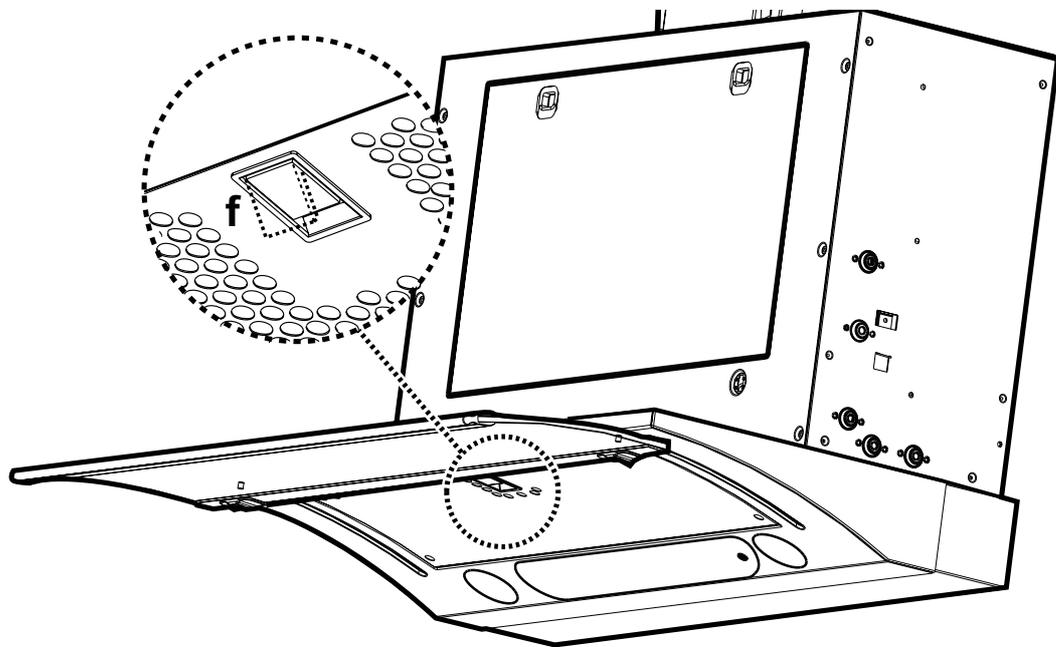


Fig. 9

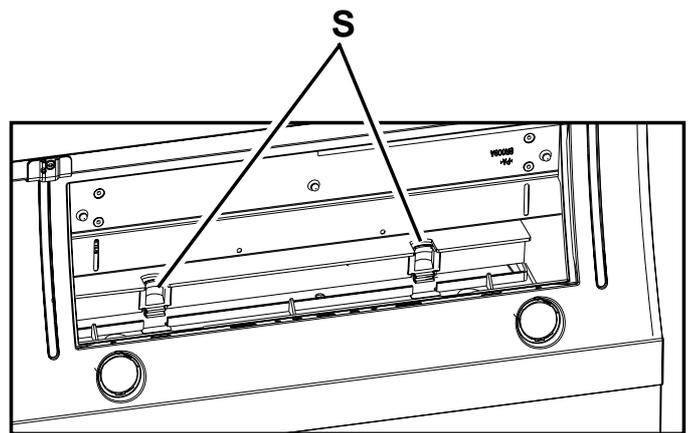
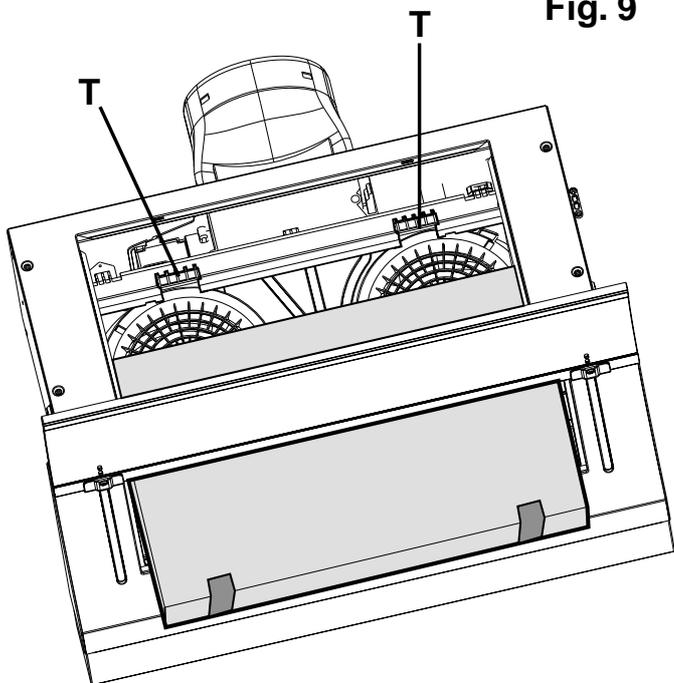


Fig. 10

- Only qualified installers are authorised to carry out installation. The installer is responsible for commissioning the appliance in accordance with the current Australian standards and requirements under law.
- The appliance is intended solely for domestic use. The manufacturer shall not be held responsible for any accident that may be caused because of improper use.
- Switch off the power supply to the equipment before starting the installation.
- The plug to be connected to the power supply cable and the relative socket must be the same type and must comply with current Australian standards.
- After installing the appliance make sure that the plug is accessible to allow the periodical check-up.
- Always remember to remove all plastic protection before using the appliance.
- Before using the appliance we recommend reading this manual and all the warnings it contains thoroughly.
- In the event of a malfunction, do not attempt to repair the appliance. Disconnect the appliance from the mains and contact your nearest Kleenmaid service centre on 1300 652 100.
- Do not pull out the plug by pulling the cable.
- The appliance cannot be connected to flues of other appliances that run on energy sources other than electricity.
- When the appliance is used at the same time as other appliances that run on energy sources other than electricity, provision must be made for an adequate supply of air.
- The electric installation shall be equipped with a safety device, able to disconnect the appliance from mains in all wires, with the distance between contacts of not less than 3 mm in open position.
- No food must be cooked flambé underneath the appliance. The use of an unprotected flame is dangerous for the filters and could cause fires. Therefore, never use an open flame under the appliance.
- When frying foods, never leave the pan alone because the cooking oil could flare up.
- Please keep to current Local Building Standards regarding fume discharge.
- The identification plate, with the technical data, serial number and marking, can be found inside the appliance. The plate must never be removed.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Never allow children to come near the appliance or to play with it. Be careful not to leave objects on the appliance that may attract children's attention. Always keep children at a safe distance from the appliance.
- Discarded appliances must be delivered solely to a specialised waste collection centre.
- Switch off the power supply to the equipment before cleaning.
- Do not clean the surfaces of the appliance when they are still hot.
- Do not use pressure or steam spray guns to clean the appliance.
- Failure to clean the appliance and replace and clean the filters as described in this manual will generate a fire hazard. Please keep to the instructions given.

The manufacturer shall not be held responsible for any injury or damage that may be caused by failure to fully comply with the instructions and recommendations in this manual, the tampering of any of the appliance components or the use of non-original spares.

Description of the hood - Fig. 1

- 1 Control panel
- 2 Grease filter
- 3 Grease filter release handle
- 4 Halogen lamp (alternatively a lamp holder with
- 5 Vapour screen
- 6 Vapour screen guides
- 7 Air exit
- 8 Fairing (supplied in two sizes)
- 9 Fixing points for cabinet
- 10 Inspection door for the suction group (ACCESS ALLOWED ONLY BY A QUALIFIED TECHNICIAN)

Installation - Fig. 5-6

The cooker hood must be placed at a minimum distance of 650mm from either electric, gas or mixed cooktops. The recommended height for canopy or island is 750mm.*

***Please confirm these measurements with your Local Building Authority.**

The hood is equipped with a top air outlet B for discharge of fumes to the outside (Ducting version – exhaust pipe and pipe fixing clamps not provided).

Where it is not possible to discharge cooking fumes and vapours externally, the cooker hood may be used in the **filter version** by mounting an active carbon filter and the deflector F on the connection ring placed on the exit perforation B (Fig. 3), the fumes and vapours are recycled via the deflector.

Preliminary information for installation of the hood: Disconnect the cooker hood from the electrical mains during the electrical connection phase.

The cooker hood is designed for installation inside a wall cabinet.

It is recommended to install the cooker hood only inside a cabinet of suitable dimensions.

Do not tile, grout or silicone this appliance to the wall. Surface mounting only.

Refer to figure 2 for useful information for safe installation and cutout dimensions to perform at the base of the cabinet for air evacuation, for the connection cable and to permit to access the electronic card that controls the cooker hood operation (ACCESS ALLOWED ONLY BY QUALIFIED TECHNICIAN).

Warning!

The cooker hood is supplied with 4 side spacers (2 for the right side and 2 for the left side), these are useful when the width of the housing cabinet for the cooker hood motor body is wider than 6mm.

In this instance the spacers should be mounted outside the cooker hood body corresponding to the perforations for the cabinet fixing screws (Fig. 2-A)

1. Measure the external cabinet depth including the cabinet door. If total depth is less than 315mm, fit 37mm fairing C. If total depth is greater than 315mm fit 75mm fairing C. The fairing C should be fixed to the cooker hood BODY brackets

using 4 screws (fig 3). This fairing must be fitted prior to installation of cooker hood BODY into cabinet.

2. Fix the air exit connector B above the cooker hood body (fig. 3).

Only for Filter Version:

place the deflector F on the exit connector.

Fix the filter holder frame inside the cooker hood, firstly above on the rings R set in the body, then on the base using the two screws S (fig. 3).

3. Place the template provided firstly on the right and then on the left (fig. 4) and perforate as indicated (3 blind holes, 2 holes at Ø 2mm, and 1 hole at Ø 5mm).

WARNING!

The lower and back border of the template must correspond to the lower and back border of the cabinet.

4. Insert cooker hood body inside the cabinet (fig. 5 & 6), this may remain temporarily in position via the side springs on cooker hood body D which are fitted into the blind Ø 5mm holes. Depress the side springs inward toward the cooker hood body using a screwdriver as a lever to insert into 5mm cabinet holes.

WARNING!

Check that the electrical cable and the fumes exit are accessible to facilitate successive connections (and for the intervention of technical servicing and maintenance)

5. Check that the guides G (fig. 7) are perfectly parallel in respect to the lower edge of the cabinet, then affix the cooker hood casing to the sides of the cabinet using 4 screws (E - Fig. 5 – two per side), the screws should be inserted from **inside the cooker hood casing** on the cabinet in correspondence to the 4 blind Ø 2mm holes previously perforated (see operation 3).
6. Insert the cooker hood cabinet base on the bracket guides G then carry out the electrical connections of the cooker hood cabinet base to the casing (fig. 7).
7. Regulate the cooker hood cabinet base in order that the frontal part is in line with the cabinet (H - fig. 8) then block the cooker hood cabinet base using 2 screws (one per side - L - fig. 8 – To insert these two screws you will need to remove the filter grill and screw them on the inserts that are fixed on the mantel guides).
8. Fix the cooker hood cabinet base to the cabinet using the 2 screws M (fig. 8), use 2 of 4 perforations available and check that the screws are fixed to the cabinet.
9. Remount the grease filter, connect the cooker hood to the electrical network and to the discharge tube, check the perfect operation of the cooker hood.

Electrical connection

The electrical tension must correspond to the tension noted on the label placed inside the cooker hood. Connect the electrical plug, where provided, to the an easily accessible outlet in conformity with local standards in force.

Where an electrical plug is not provided (for direct connection to electrical network) place a standards approved bipolar switch with an aperture distance of not less than 3mm (accessible) from the contacts.

If the hood fails to operate correctly, briefly disconnect it from the mains power supply for almost 5 sec. by pulling out the plug. Then plug it in again and try once more before contacting the Technical Assistance Service.

Warning!

Always press the fan off button **A** before disconnecting the hood from the mains supply.

Cleaning

The cooker hood should be cleaned regularly internally and externally. For cleaning use a cloth moistened with denatured alcohol or neutral liquid detergents. Avoid abrasive detergents.

Warning:

Failure to carry out the basic standards of the cleaning of the cooker hood and replacement of the filters may cause fire risks. Therefore we recommend observing these instructions.

Maintenance

Prior to any maintenance operation ensure that the cooker hood is disconnected from the power supply.

Grease filter

This must be cleaned once a month non aggressive detergents, either by hand or in the dish-washer, which must be set to a low temperature and a short cycle.

When washed in a dish-washer, the grease filter may discolour slightly, but this does not affect its filtering capacity. To remove the grease filter, pull the spring release handle. Fig1 (3)

Charcoal filter (filter version only)

It absorbs unpleasant odours caused by cooking.


The carbon filter should be replaced every six months.(and

1. Slide out the vapour collector.
2. Remove the grease filter.
3. If the carbon filter is already mounted and requires replacement, depress the unblocking key (**S** - Fig. 10) and remove the filter downward.
4. Remount the grease filter.

If the carbon filter is not mounted:

1. Slide out the vapour collector.
2. Remove the grease filter.
3. Insert the carbon filter in the upper hooks **T** and fix it using the lower hooks **S** (Fig. 10).
4. Remount the grease filter.

Operation – Model with button panel

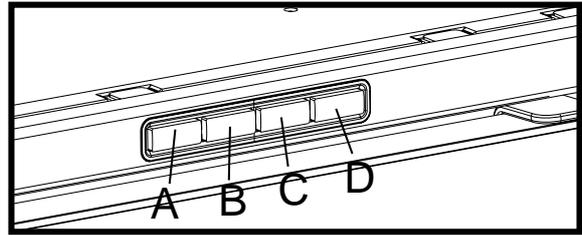

- A. on/off light switch
- B. on/off switch and minimum power selection
- C. medium power selection switch
- C+D. maximum power selection switch

Use the high suction speed in cases of concentrated kitchen vapours. It is recommended that the cooker hood suction is switched on for 5 minutes prior to cooking and to leave in operation during cooking and for another 15 minutes approximately after terminating cooking.

Replacing lamps - Fig. 4

Remove grease filter and push light fitting downwards to access bulb.

Warning!

Prior to touching the light bulbs ensure they are cooled down.

Model with halogen light bulbs.

Replace the light bulb with a new PHILIPS STANDARD LINE code 425409 12V 20W 30° Ø35 12V GU4.

Carry out the replacement and the mounting of the new light bulb following the procedure in reverse.

Replacement lamps are not covered by warranty.

Caution

This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the appliance. Do not use the cooker hood where the grill is not correctly fixed! The suctioned air must not be conveyed in the same channel used for fumes discharged by appliances powered by other than electricity. The environment must always be adequately aerated when the cooker hood and other appliances powered by other than electricity are used at the same time. Flambé cooking with a cooker hood is prohibited. The use of a free flame is damaging to the filters and may cause fire accidents, therefore free flame cooking must be avoided. Frying of foods must be kept under close control in order to avoid overheated oil catching fire. Carry out fumes discharging in accordance with the regulations in force by local laws for safety and technical restrictions.

If the lights do not work, make sure that the lamps are fitted properly into their housings before you call for technical assistance.

WARRANTY AND SERVICE

DOMESTIC WARRANTY - FULL FIVE YEAR WARRANTY

In addition to all statutory rights which you, the Consumer, have under the relevant laws in respect of this appliance, during the first five years of ownership as the original purchaser of this Kleenmaid appliance, we guarantee that any fault caused by faulty material or workmanship becoming apparent will be rectified free of charge for parts and labour, provided that all service is performed during normal working hours by Kleenmaid or their designated Agents. Where the appliance is installed outside the normal servicing area of the above, the Purchaser must pay for the cost of transporting the appliance to and from the Agent or the Agent's travelling cost to and from the Purchaser's home.

COMMERCIAL WARRANTY - ONE YEAR WARRANTY

When this appliance is installed in a commercial application, you, the Consumer, have under the relevant laws in respect of this appliance, during your first one year of ownership as the original purchaser of this Kleenmaid appliance, we guarantee that any fault caused by faulty material or workmanship becoming apparent, will be rectified free of charge for parts and labour, provided that all service is performed during normal working hours by Kleenmaid or their designated Agents. Where the appliance is installed outside the normal servicing area of the above, the Purchaser must pay for the cost of transporting the appliance to and from the Agent or the Agent's travelling cost to and from the Purchaser's home.

WHAT THESE WARRANTIES DO NOT COVER

We are not responsible for any damage or malfunction unless caused by a defect in material or workmanship. This includes but is not limited to abuse, misuse, improper installation and transportation damage. We are not responsible for any consequential damages from any malfunction.

The Consumer must make the appliance available for servicing and shall bear any costs incurred for any de-installation and/or re-installation required to make the appliance available for servicing. Kleenmaid is not liable for any consequential damage incurred during de-installation or re-installation.

WARRANTY DOES NOT COVER REPLACEMENT OF LIGHT GLOBES OR GLASS BREAKAGE DUE TO IMPACT

In case of fractured glass do not use your appliance.

WARRANTY REGISTRATION

Please complete warranty details below and retain together with your proof of purchase document. These documents will need to be viewed by our Service Representative should you request in warranty service.

SERVICE ASSISTANCE

To assist you when phoning our After Sales Service number to arrange a service call please complete the following details and have them ready when you call.

Model Number _____ Date of purchase _____

Kleenmaid Store purchased from _____ Date of installation _____

KLEENMAID AFTER SALES SERVICE

1300 652 100

**Other products available in the Kleenmaid
Range of appliances**

Washers

Dryers

Dishwashers

Ovens

Cooktops

Outdoor Cooking Centres

Built In Espresso Coffee Machines

Rangehoods

Freestanding Ranges

Sinks

Waste Disposals

Taps

Cookware

Refrigerators

Freezers

Wine Cellars

Vacuum Cleaners

**For sales information on the full range of quality appliances
Phone 13 13 08**