

RANGEHOOD

c o l l e c t i o n

Instructions for Use and Warranty Details

Rangehoods RH9 - Canopy 900mm

**KLEENMAID**
THE WORLD'S BEST

Instruction on mounting and use

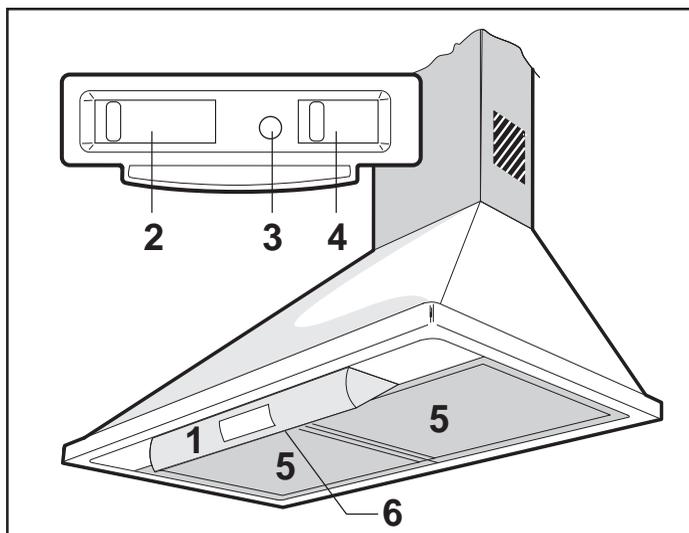


Fig. 1

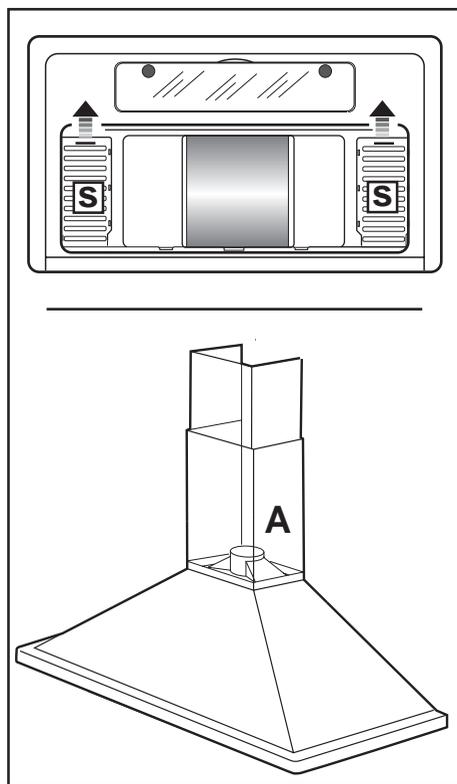


Fig. 2

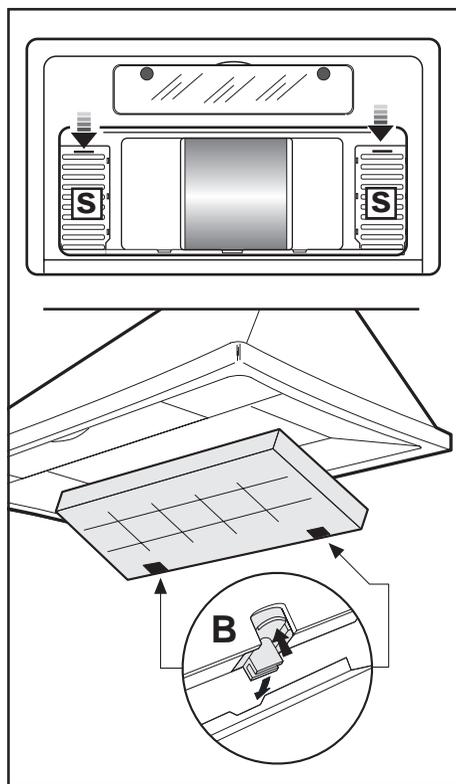


Fig. 3

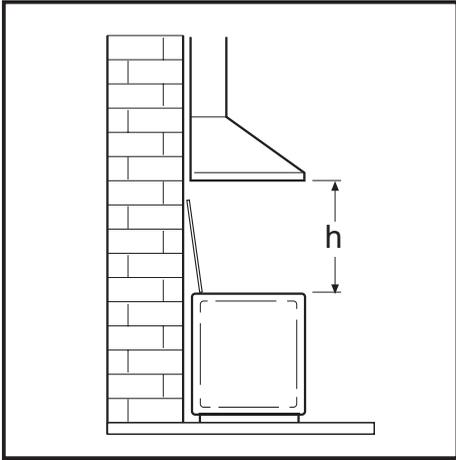


Fig. 4

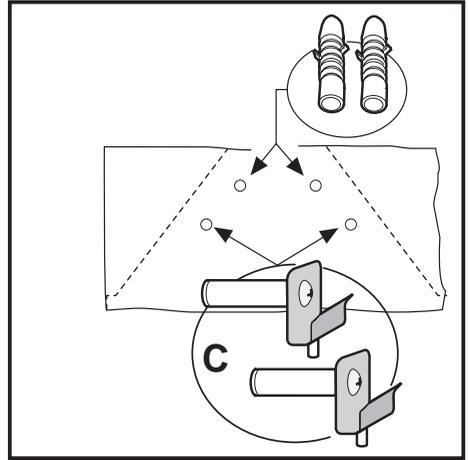


Fig. 5

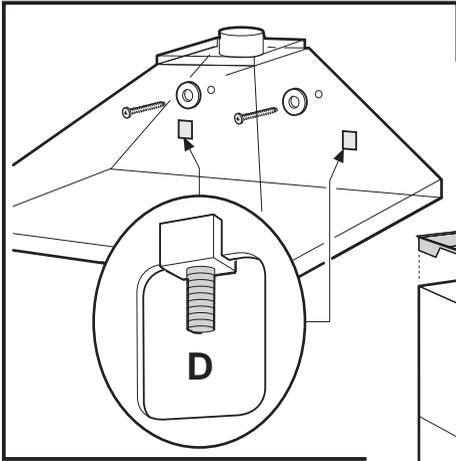


Fig. 6

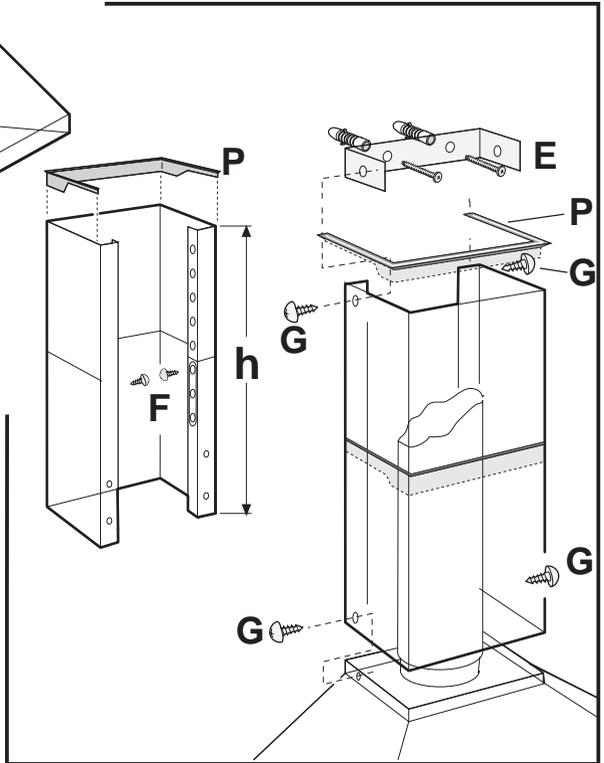


Fig. 7

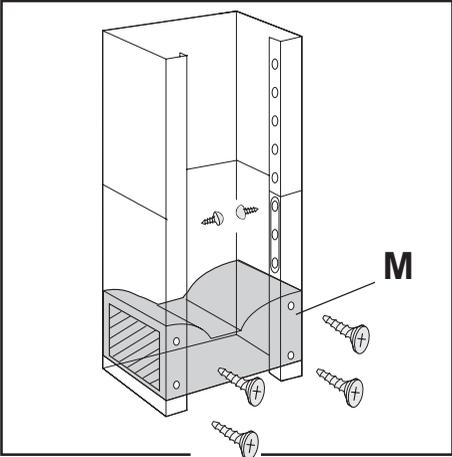


Fig. 8

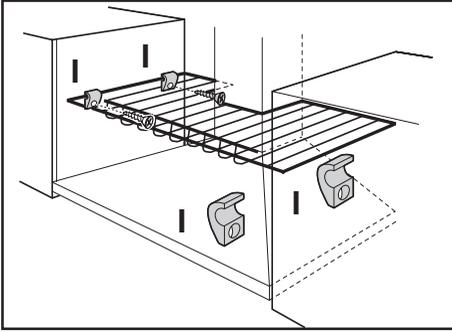


Fig. 9

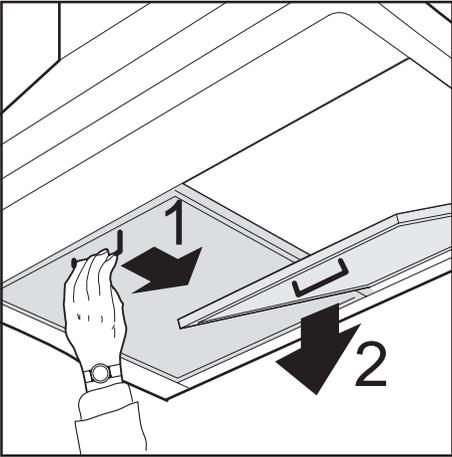


Fig. 10

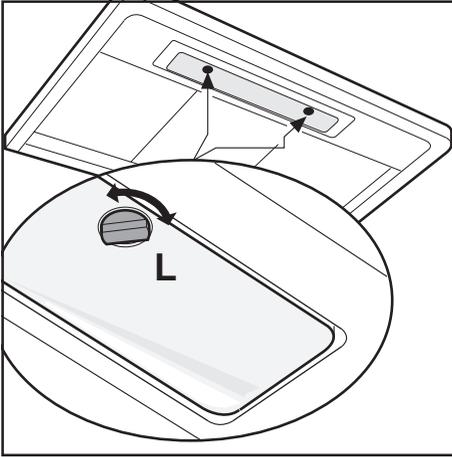


Fig. 11

Hood Description - Fig. 1

- 1) Control panel
- 2) Motor speed button
- 3) Operating light
- 4) Light button
- 5) Exhaust grate
- 6) Work-light

Use

Two systems are available:

Exhaust version

The air is vented outdoors by a duct which must be connected to connecting ring **A** (Fig. 2).

For 90cm. hood

Check if the internal shutter **S** are opened before using the hood (Fig. 2).

Attention!

If the hood is supplied with carbon filter, then it must be removed.

Filter version

The air is filtered through a carbon filter and recirculated into the room through the grating on the lower side of the chimney.

This version is used when there is no exhaust duct for venting outdoors or when it is impossible to install one.

To use the hood in this version, proceed as follows:

- If no filter is supplied with the hood, ask the technical assistance service or the manufacturing company for one and specify the hood model.
- Remove the grease filters (Fig. 10).
- To install the filter, fit it in the seat at the front and fasten it at the back with the two hooks **B** (Fig. 3).

For 90cm. hood

Attention! Close the shutter **S** before using this version of the hood (Fig. 3).

- Refit the grease filter.

Installation

When installed, the hood must be not less than 65 cm. above electric burners or 75 cm. above gas or mixed-fuel burners. (h, Fig. 4).

In the vented exhaust version the fumes outlet duct must be 120 mm. in diameter.

In the horizontal runs the duct must be slightly slanted (about 10°) and directed upwards to vent the air easily from the room to the outside.

Electric connection

Before completing any connection, make sure the house voltage corresponds with the voltage indicated on the label affixed inside the hood

It is advisable to call a qualified technician to make the electrical connection.

Appliance fitted with plug.

Connect it to a socket which conforms with current regulations.

If you intend to connect it directly to the electric mains, remove the plug and fit an approved bipolar switch with a minimum contact opening of no less than 3mm.

If the plug is not accessible once it has been inserted in the socket, it will however be necessary to fit an approved bipolar switch with a minimum contact opening of no less than 3mm.

Appliance without plug

Fit an approved plug or an approved bipolar switch with a minimum contact opening of not less than 3mm.

The manufacturers are not liable for any problems caused by the user's failure to observe the above instructions.

Electrical Connection only for UK

WARNING!

This appliance must be earthed.

The manufacturers will not accept liability for any problems however caused by the failure of the user or installer to comply with these instruction or with safety regulations.

It is recommended that installation is carried out by a qualified electrician.

This appliance is intended to be permanently connected to the electrical supply through a double-pole switched fused spur - (disconnecter) - fitted with a 3 or 5 amp fuse. The opening distance between the switch contacts shall not be less than 3 mm. The installation must conform to the requirements of BS 7671.

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral:

-To be connected to the supply terminal marked 'N' or coloured Black.

Brown live:

-To be connected to the supply terminal marked 'L' or coloured Red.

Yellow/Green earth:

-To be connected to the terminal marked 'E' or earth symbol or coloured green.

This appliance is not intended to be connected to the electrical supply through a plug and socket, but if for any reason a plug should be fitted, then it must be wired according to the colour code as shown above.

Warning

Ensure that the appliance is isolated from the supply before carrying out installation.

Fastening the hood to the wall

- Place the template against the wall. The lower edge of the template must match the lower edge of the hood (Fig. 5).
- Drill two Ø 8mm holes and two Ø 12mm holes (Fig. 5).
- Fit the two Ø 8mm plugs in the top holes (Fig. 5).
- Fasten the two hooks **C** in the bottom holes (Fig. 5).
- Remove the grease filters (Fig. 10).
- Hang the hood on the hooks and level it with the screws **D** (Fig. 6).
- Secure it in place with the two 5x45 mm screws and 5-20 mm diameter washers in the top holes (Fig. 6).
- Refit the grease filter.

Installing the duct (exhaust version) (Fig. 7)

- Fasten the top support **E** to the wall close to the ceiling on the perpendicular of the bottom connections. To do use the two 8mm diameter screws and plugs supplied as standard equipment.
- Insert the plastic mould **P** on the duct.
- Take the measure **h** between the ceiling and the hood top, and adjust the duct to this height.
Fasten it with the screws **F**.
- Insert the duct with the slots downwards and fasten it with the two top screws and the two bottom screws **G**.

Installing the duct (filter version)

- Perform the same operations described in the preceding paragraph.
With screws supplied, fasten the air conveyer **M** inside the duct (Fig. 8).

Fastening of shelves (optional)

Fasten the four side supports **I** to the adjacent cabinets and place the shelf on the supports (Fig. 9).

Using the hood

- The hood is provided with a motor with several speeds. For the best performance, we recommend using the low speeds in normal conditions and the high speeds in particular cases of strong odour and vapour concentration.
- We recommend starting up the hood a few minutes before cooking and keeping it running until all the odours have been eliminated.
- To start the appliance, pull the control panel downwards for access to the light and motor switches.

The hood has a microswitch so that once the motor speed has been selected and the light switched on, the hood can be started by simply pulling out the control panel.

When the panel is closed, the hood switches off.

The control panel can be positioned at the desired angle to light the cooking area.

Warning!

- This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the appliance .
- The hood cannot be connected to flues of other appliances that run on energy sources other than electricity.
- When the hood is used at the same time of other appliances that run on energy sources other than electricity, provision must be made for an adequate supply of air.
- No food must be cooked flambé underneath the hood.
The use of an unprotected flame is dangerous for the filters and could cause fires.
Therefore, never use an open flame under the hood. When frying foods, never leave the pan alone because the cooking oil could flare up.
- Please, keep to the provisions of official directives regarding the question of fume discharge.
- The manufacturers refuse to accept any

responsibility for damage to the hood or its catching on fire because of failure to observe the above instructions.

Maintenance

Before performing any maintenance operation, isolate the hood from the electrical supply by switching off at the connector and removing the connector fuse.

Or if the appliance has been connected through a plug and socket, then the plug must be removed from the socket.

Metal grease filter

This serves to hold the grease particles in suspension.

The metal grease filter last forever and must be washed at least once a month either by hand or in the dishwasher (65°C) with suitable detergents. Let the metal grease filters dry without damaging them before putting them back into place.

Removing the metal grease filter (Fig. 10):

- 1 - push the grease filter handle backwards
- 2 - then pull downwards.

After having cleaned refit the metal filter on its housing proceeding in reverse order.

Carbon filter

This filter dissolves cooking odours.

The carbon filter must never be washed.

It should be changed every 6 months in normal use.

- Remove the grease filters.
- To remove the carbon filter, push the push-buttons **B** inwards and pull the filter downwards (Fig. 3).
- Install the new carbon filter.
- Refit the grease filter.

Cleaning

To clean the outside of the hood use a cloth moistened with denatured alcohol or neutral liquid detergents. Never use products containing abrasive.

Wipe brushed stainless steel in the same direction as the brushing to avoid scratching.

Clean the external surface of the cooker hood almost once every 10 days.

Attention

Failure to observe the rules for cleaning the appliance and changing and cleaning the filters may cause fires.

Therefore, we recommend observing these instructions.

Changing the lighting elements

- Disconnect the hood from the electricity.
- Open the light cover by turning the latches **L** (Fig. 11).
- Replace the damaged part with one of equal rating.
- Before calling for technical service because the light fails to work, make sure the lamp is tightly fastened.