

## **ATTENTION**

Telescopic rails are fitted to level 1 and 3 of the oven to facilitate easy inspection and removal of cooked food & utensils.

Should these rails be unclipped for cleaning or re-positioning it is imperative that the wire side racks and rail clips are not bent or damaged. (Note: The side frames and telescopic rail components are specific to the LH or RH side of the oven.)

Upon re-insertion, the front telescopic clip must be located and clipped in under the 'V' of the appropriate shelf wire and then onto the wire below. The rear clips are then inserted onto the same level shelf of the side frame.

After assembly with the side racks each clip must be inspected to ensure that the wire frame is positively and fully seated into all grooves. The side racks can then be re-installed to the appropriate side.

If cleaners are used on the telescopic rails then ensure that they adequately flushed to remove all residue from within the tracks before use.