

cooking collection

Instructions for use and warranty details

Rangehood – 40cm
Model No.: RHIDB40

 **kLEENmaid**

Congratulations on the purchase of your new Kleenmaid appliance.

Your new Kleenmaid appliance has been designed and manufactured to give you years of reliable performance.


For best results, carefully read the instructions on how to install your new appliance. Correct installation will avoid delays and unnecessary service call costs.

Once installation is complete, please read this entire instruction manual carefully and get to know the controls and the features of your new Kleenmaid appliance.

Again, congratulations and thank you for choosing Kleenmaid.



A

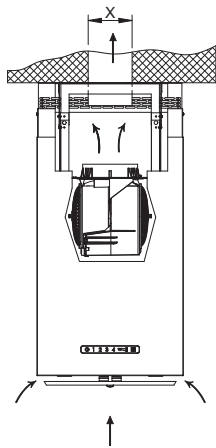

1X

 



2X



X = $\begin{cases} 1 \times \text{ø}150 \\ \text{O} \\ 1 \times \text{ø}120 \end{cases}$


B

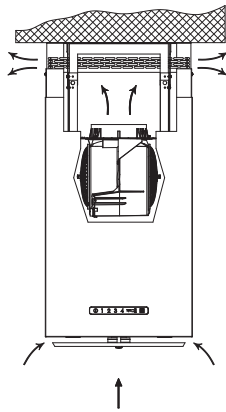



1X









1X

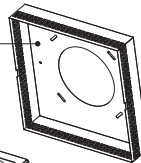

1X

 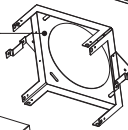


1X

 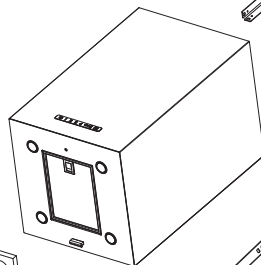    

1X

1X M6 x 40

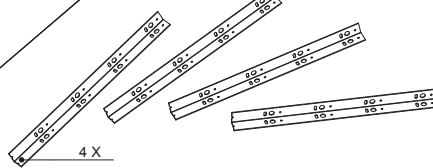

4X

Dear Customer,

we would like to thank you and congratulate you on your choice.

This new product has been carefully designed and built using top quality materials, and meticulously tested to ensure that it meets all your culinary requirements.

Please read and observe these simple instructions, which will enable you to achieve excellent results from the very first time you use it. This state-of-the-art appliance comes to you with our very best wishes.

THE MANUFACTURER

THIS PRODUCT IS DESIGNED FOR DOMESTIC USE.

THE MANUFACTURER DECLINES ALL RESPONSIBILITY FOR DAMAGES TO THINGS OR PEOPLE DERIVING FROM INCORRECT INSTALLATION OR IMPROPER, ERRONEOUS OR UNSUITABLE USE.

THE APPLIANCE MUST NOT BE USED BY PEOPLE (INCLUDING CHILDREN) WITH PHYSICAL, SENSORIAL OR MENTAL IMPAIRMENTS, OR BY PEOPLE WITHOUT THE NECESSARY EXPERIENCE

OR KNOWLEDGE, UNLESS THEY ARE SUPERVISED OR INSTRUCTED IN THE USE OF THE APPLIANCE BY A PERSON RESPONSIBLE FOR THEIR SAFETY.

CHILDREN MUST BE SUPERVISED TO ENSURE THAT THEY DO NOT PLAY WITH THE APPLIANCE.

We recommend that you wear gloves during installation and maintenance.

When installing an extracting version (the extracted air is sent outside = Fig. A), it is important to:

- prepare an air exhaust hole and duct with a diameter of 150 mm.
- use a duct that is as short as possible
- use a duct with the least number of curves possible (maximum curve angle 90°)
- avoid the use of flat ducts and ducts of different section as much as possible
- use a duct with the smoothest possible interior and conforming to the standard
- do not connect the hood to a duct that exhausts fumes produced by combustion (fireplaces, boilers, ovens, etc.)
- do not discharge the air into a cavity in the wall unless the cavity has been prepared for that purpose.
- provide the room with air intakes so that the hood does not create negative suction (no higher than 0.04 mbar)

When installing a filtering version (FIG. B = The extracted air is returned to the kitchen) there is no need to prepare a hole and exhaust duct, but you must provide an activated carbon filter (request it separately as an accessory).

Fig. 1: using the fixing bracket (1), mark the positions of the fastening holes on the ceiling.

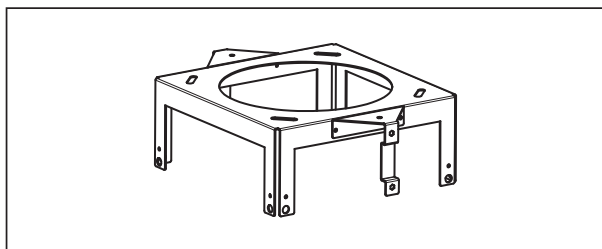


Fig. 2: attach the cover with grill (2) to the fixing bracket (1). (If you wish this cover can be omitted in the extracting version).

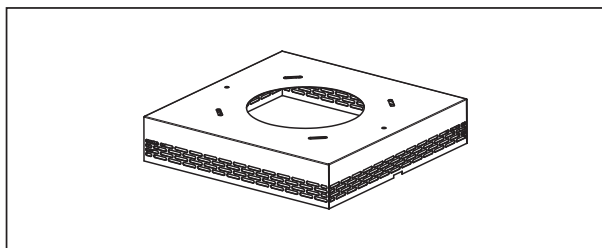


Fig. 3: fix the cover (2) and bracket (1) to the ceiling with the 6 Ø 8 anchors, the 6 Ø 4.2x32 screws and the washers provided.

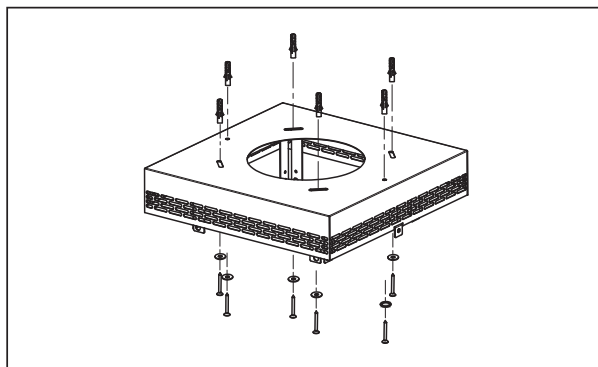


Fig. 4: select the desired height for the installation of the hood.

Note: the positioning corner pieces must have the bevelled part facing downwards as in detail A.

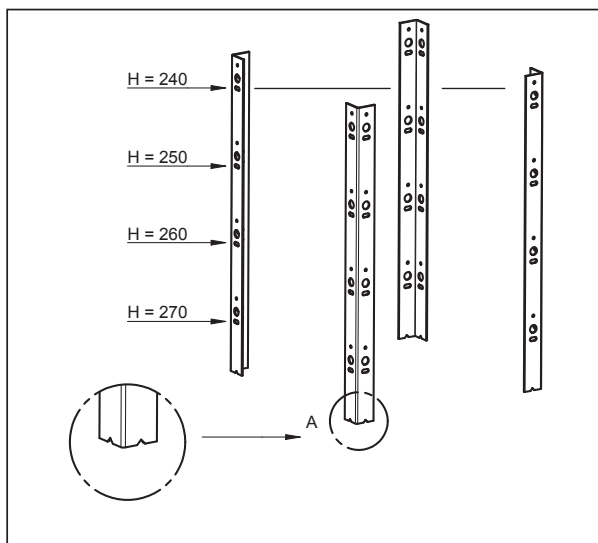


Fig. 5: fix the 4 corner pieces in position as shown in the figure using the 8 3.5x6.5 screws provided for the upper part and the 8 3.5x6.5 provided for the lower part.

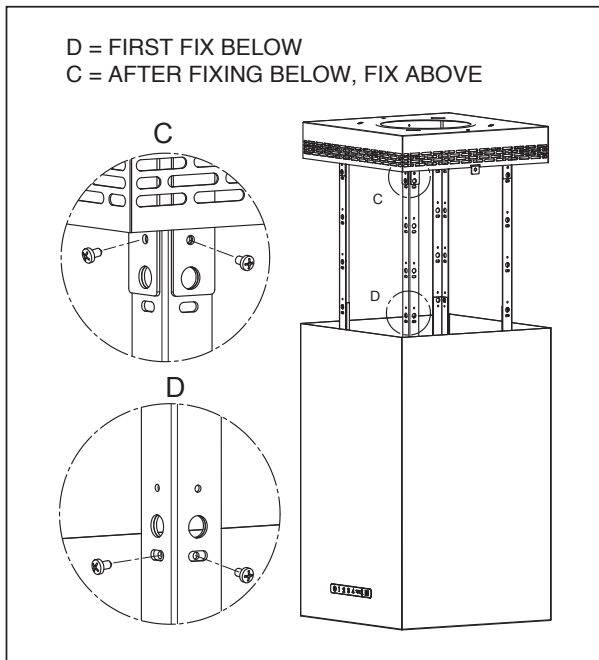


Fig. 6: adjust the telescopic section of the upper cylinder and fasten it to the bracket (1) using the two M4X12 screws provided.

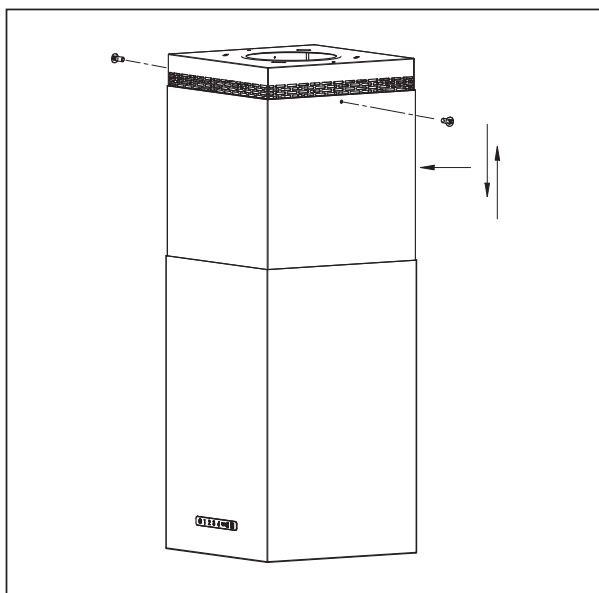


Fig. 7: mount the grease filter on the hood cylinder with the metal handle.

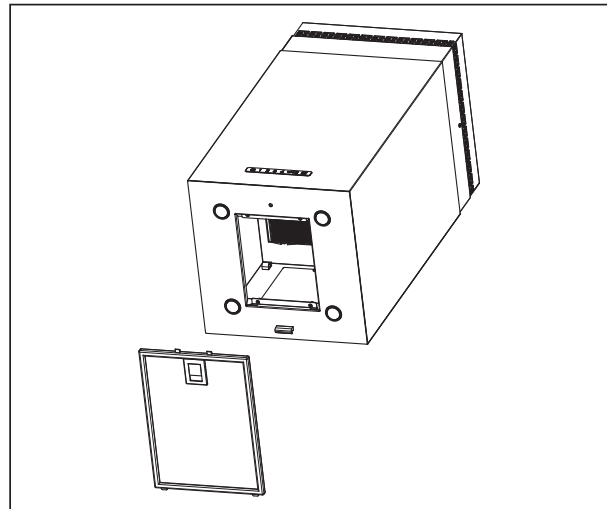


Fig. 8: position the glass with the smaller diameter facing down (A).

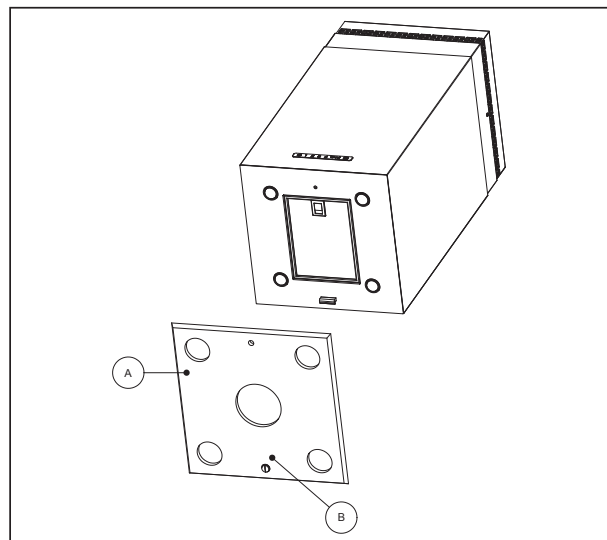


Fig. 9: hook the hinge (B) integrated into the glass to the hook of the male hinge C.

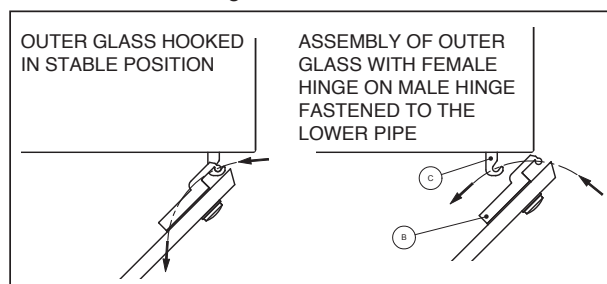


Fig. 10: slide the H26 Nylon spacer on the M6X40 screw provided and fasten it, by passing through the hole in the glass, to the upper hole in the hood cylinder, tightening it by hand or using a tool or coin.



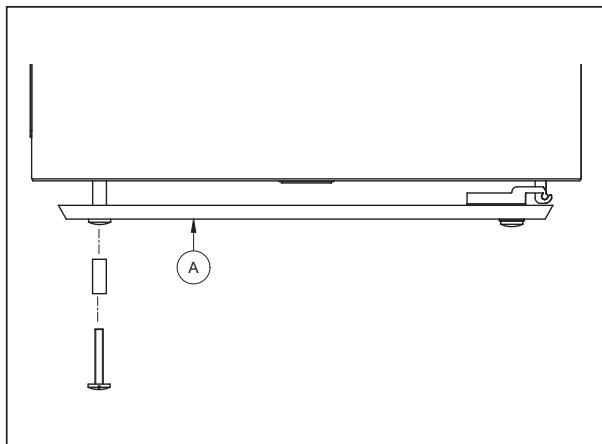


Fig. 11: if a filtering hood is being installed, you must request a carbon filter (D) (supplied as a separate accessory). Proceed to the insertion of the drawer-type carbon filter with the required type of slot system.

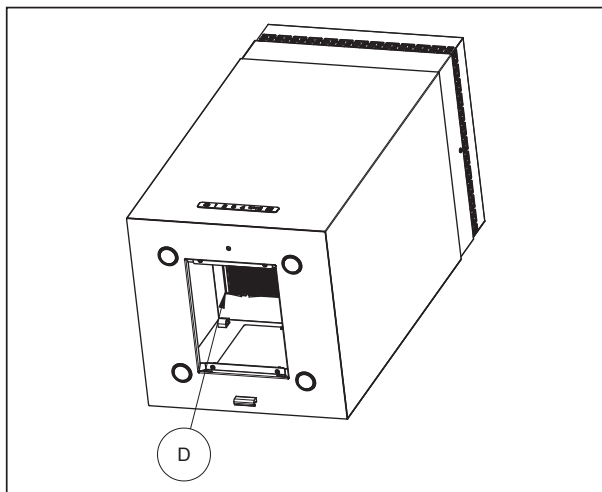

CONTROLS

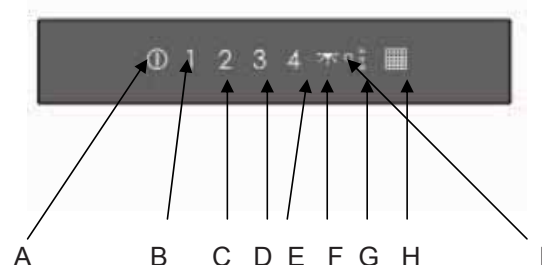

- A) starts/stops the motor at the second speed (the intermediate operating speed)
- B) selects the first motor speed
- C) selects the second motor speed
- D) selects the third motor speed
- E) selects the fourth motor speed
- F) turns on the halogen lamp: if held down, you can select 3 different levels of light. The last level selected is remembered for the next time it is turned on.
- G) turns on the timer (delayed turn-off): you can choose from 3 times (10', 15', 20')
- H) *Filter alarm (see detail)
- I) remote-control receiver sensor

*Filter alarm:

the first thing to do after inserting the plug is to set the hood to extracting or filtering mode; proceed as follows: when the plug is inserted, all the lights turn on for several seconds: in this state, press the on/off button for about 8 seconds until the H LED lights. Then press B if you want the hood to operate in extraction mode (in this mode, the carbon filter count is not working because there is no filter); the red LED of the H filter light flashes and you confirm the selection by pressing it.


To set the hood to filtering mode (and, thus, with counts for both the grease filters and the carbon filters), about 8 seconds after turning it on, press C and the red light of the H filter hood will turn steady on; press it to confirm.

After 30 hours of operation, the H button will turn steady on: this means that it is time to remove and clean the grease filters.

If the hood is in filtering mode, after 140 hours of operation, the H button will flash: this means that it is time to replace the carbon filters. To reset the count, press the H button for 7-8 seconds.

The filter hour count cannot be reset until the system turns on one of the alarms. So it is not possible to perform intermediate resets.

OPERATION OF THE REMOTE CONTROL

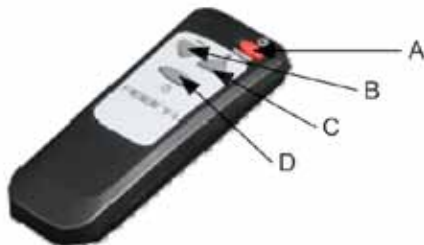

- A) Turns the hood on/off at the second speed
- B) Decreases the speed of the motor
- C) Increases the speed of the motor
- D) Turns the lights on/off. (The intensity can only be regulated manually directly on the hood)

MAINTENANCE

Turn off the electricity before performing any maintenance or cleaning!

Cleaning the hood:

clean the hood at least once every 2 months to avoid the risk of fire; to clean the external body, use a cloth wet with warm water and a neutral detergent for painted hoods and products specifically made for steel for steel hoods. To clean inside the hood, use a cloth wet with denatured alcohol.

Do not use abrasive or corrosive products!

Cleaning the grease filters (on both the extracting and filtering hood versions)

clean the grease filters at least once every 2 months to avoid the risk of fire (however, the frequency of cleaning depends on how intensely you use the hood).

To remove the grease filter, use the handle on the filter.

Wash with neutral detergent by hand or in the dishwasher. Keep in mind that washing in the dishwasher could discolour/darken the filters without, however, reducing their effectiveness.

Replacing the carbon filters (filtering version only):

replace the activated carbon filters at least once every 6 months to avoid the risk of fire (however, the frequency of cleaning depends on the intensity with which you use the hood).

Replacement of bulbs:



Delicately remove the glass bulb cover with a screwdriver. Replace the bulb with the same type, taking care not to touch the new bulb with your bare hands to void damaging it.

Do not touch the bulb if it is still hot!

OPERATING PROBLEMS

Before calling for service, check these simple things:

Why is the hood not working?

- has the electricity been interrupted?
- was the hood on?
- is the power plug disconnected and/or damaged?

Why is the hood working poorly?

- was the hood turned on at a sufficient speed to extract the fumes and vapours generated?
- is the kitchen sufficiently ventilated to allow for good air intake?
- do the grease filters need to be cleaned?
- do the carbon filters need to be replaced (in the case of a filtering hood)?
- after 10 minutes of uninterrupted operation at the fourth speed, the hood automatically goes to the second speed unless a timer was activated (energy savings).

Why did the hood suddenly turn off?

- was there a sudden interruption of the current?
- is the power plug disconnected and/or damaged?
- after 5 hours of uninterrupted operation, the hood automatically turns off (energy savings)

Warranty and Service

Domestic Warranty – Full two year warranty

In addition to all statutory rights which you, the Purchaser, have under relevant laws in respect of this appliance, during the first two years of ownership as the original purchaser of this Kleenmaid appliance, Compass Capital Services trading as Kleenmaid guarantee that any fault caused by defective material or workmanship becoming apparent will be rectified free of charge with reference to parts and labour, provided that all service is performed during normal working hours by Kleenmaid or their designated Agents. Where the appliance is installed outside the normal servicing area of the above, the Purchaser must pay for the cost of transporting the appliance to and from the Agent or the Agent's travel cost to and from the purchaser's home.

Commercial Warranty – One year warranty

When this appliance is installed in a commercial application, in addition to all statutory rights which you, the Purchaser, have under relevant laws in respect of this appliance, during the first one year of ownership as the original purchaser of this Kleenmaid appliance, Compass Capital Services trading as Kleenmaid guarantee that any fault caused by defective material or workmanship becoming apparent will be rectified free of charge with reference to parts and labour, provided that all service is performed during normal working hours by Kleenmaid or their designated Agents. Where the appliance is installed outside the normal servicing area of the above, the Purchaser must pay for the cost of transporting the appliance to and from the Agent or the Agent's travel cost to and from the purchaser's home.

What these warranties do not cover

Compass Capital Services trading as Kleenmaid is not responsible for any damage or malfunction unless caused by a defect in material or workmanship. This includes but is not limited to abuse, misuse, improper installation and transportation damage. Compass Capital Services trading as Kleenmaid is not responsible for consequential damages from any malfunction.

This warranty does not cover consumable items, replacement of light globes or glass breakage due to impact. In case of fractured glass do not use your appliance.

Purchaser's responsibility

The Purchaser must make the appliance available for servicing and shall bear any costs incurred for any de-installation and/or re-installation required to make the appliance available for servicing. Compass Capital Services trading as Kleenmaid is not liable for any consequential damage incurred during de-installation or re-installation.

Warranty registration and Proof of Purchase.

Please complete warranty details below and retain together with your proof of purchase document.

When requesting service under this warranty the Purchaser agrees that Proof of Purchase of their Kleenmaid appliance will be necessary in order to make the warranty valid. Inability to provide Proof of Purchase even though this warranty is in place will not bind Compass Capital Services trading as Kleenmaid to repair the appliance at no charge under this warranty and will require the Purchaser to pay for the service costs in full.

Model Number _____ **Date of purchase** _____

For service assistance visit

www.kleenmaid-appliances.com.au

Other products available in the Kleenmaid range of appliances

- | Washing machines
- | Clothes dryers
- | Dishwashers
- | Ovens
- | Cooktops
- | Steam ovens
- | Microwave ovens
- | Built in espresso coffee machines
- | Rangehoods
- | Freestanding ranges
- | Sinks
- | Taps

Compass Capital Services Pty Limited
trading as Kleenmaid
ABN 96138214525

Level 29, Chifley Tower,
2 Chifley Square,
Sydney NSW, 2000

E: help@kmaid.com.au
www.kleenmaid-appliances.com.au

