

# cooking collection

---

Instructions for use and warranty details

Rangehood – 90/120cm

Model No.: RHCR90, RHCR120 and RHIR90

 **kLEENmaid**



## Congratulations on the purchase of your new Kleenmaid appliance.

---

Your new Kleenmaid appliance has been designed and manufactured to give you years of reliable performance.

For best results, carefully read the instructions on how to install your new appliance. Correct installation will avoid delays and unnecessary service call costs.

Once installation is complete, please read this entire instruction manual carefully and get to know the controls and the features of your new Kleenmaid appliance.

Again, congratulations and thank you for choosing Kleenmaid.

 




**A= Wall cooker hood**



**B= Island hood**

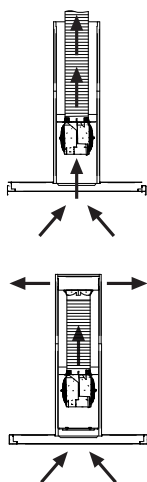


1X




2X

 1X Ø 150 mm

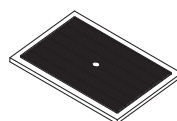


**A**

 1x




1X

 1X

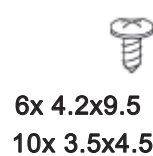

6x 4.2x9.5  
10x 3.5x4.5

 

4x 3.5x6.5



2xM5x25

8x Ø6



8x 4.2x32



 
 
 
 
 
1X

 
 
 
 
 
 
 
 


 
 
 
 
 
 
 
 
1X



 
 
 
 
4x Ø18xØ6

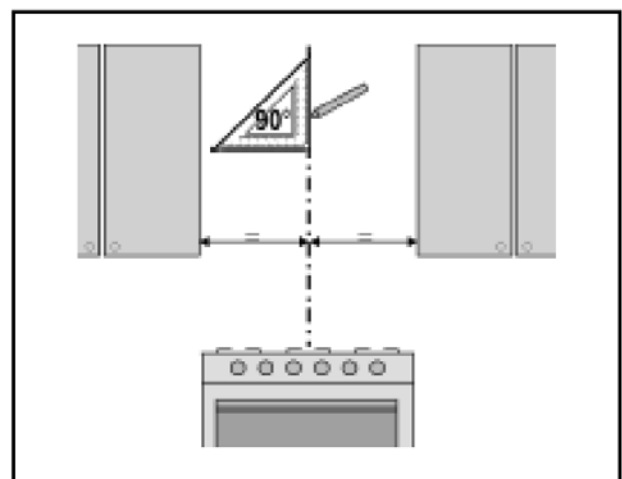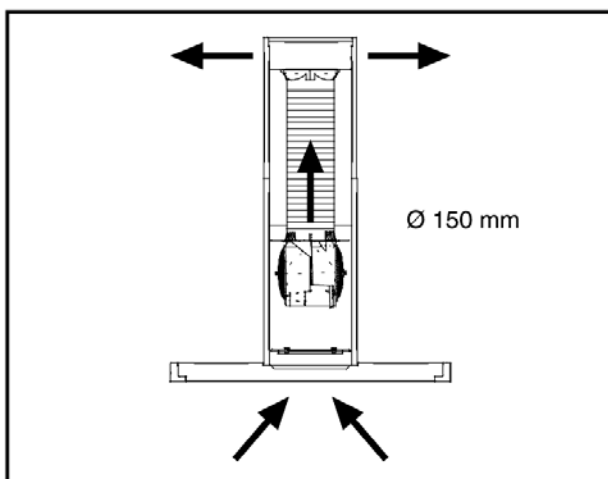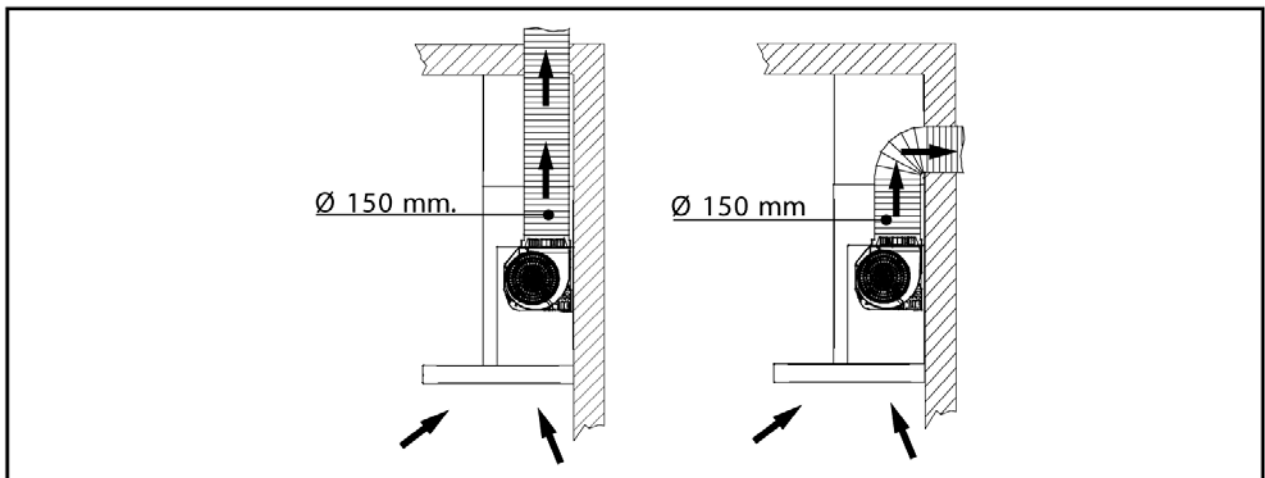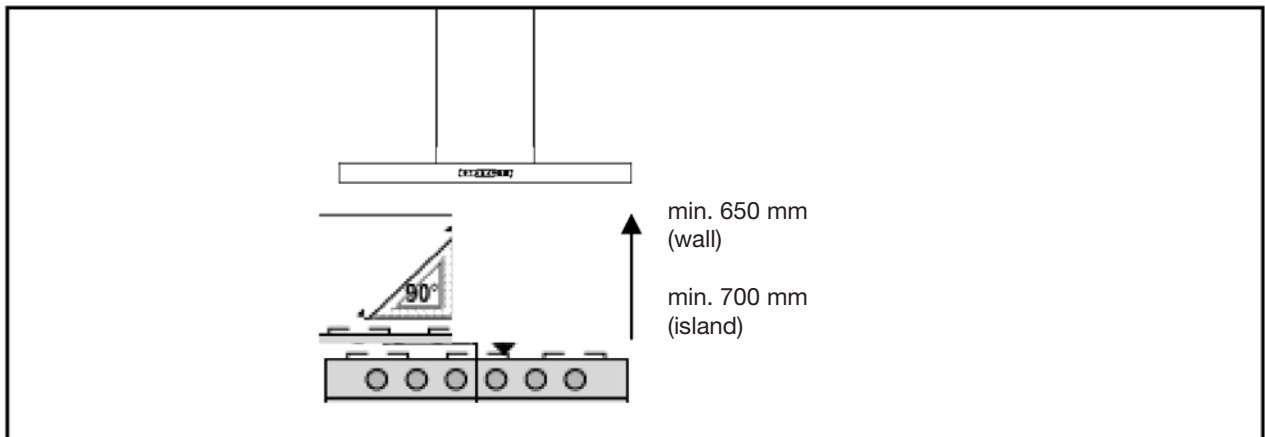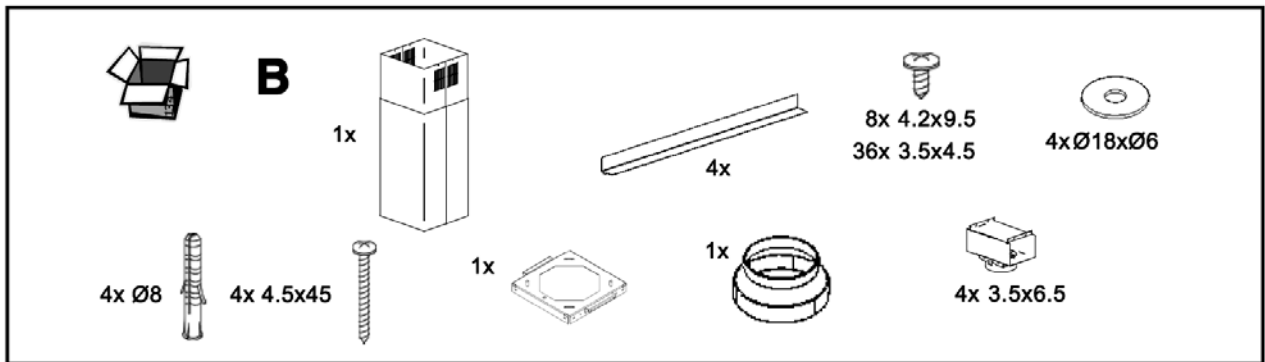

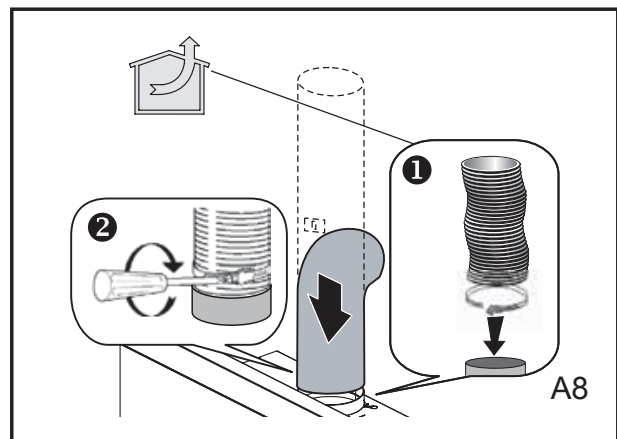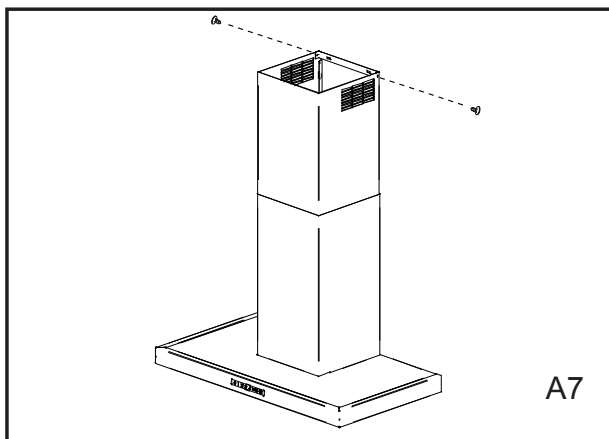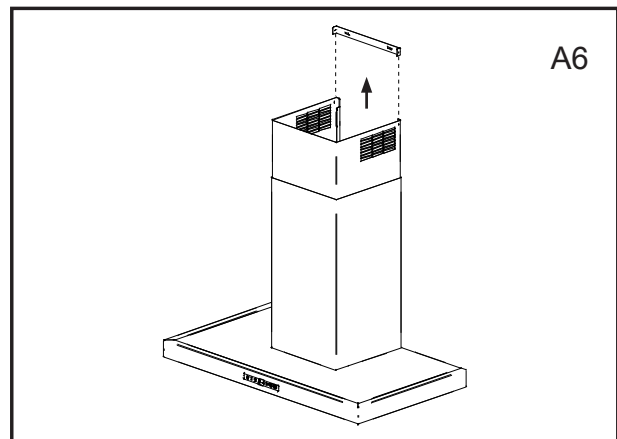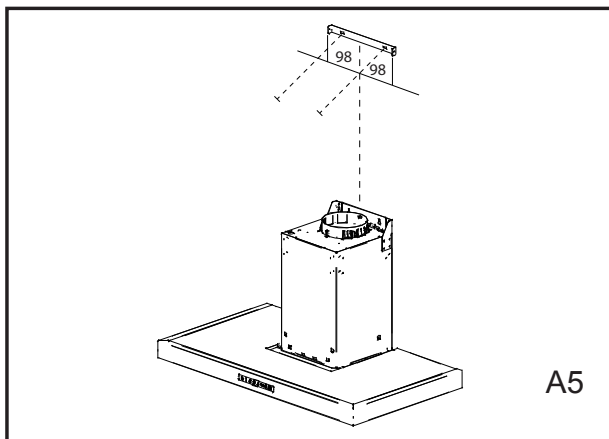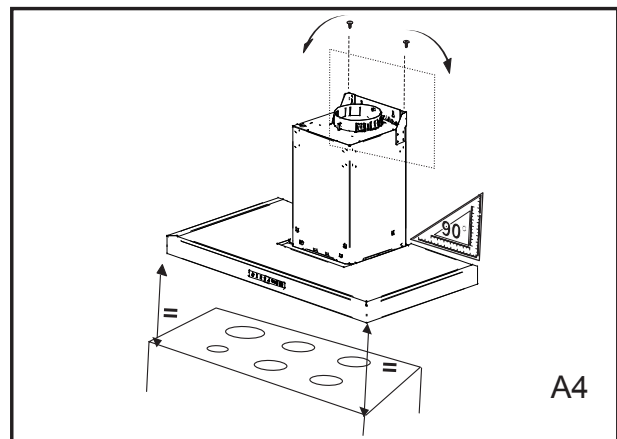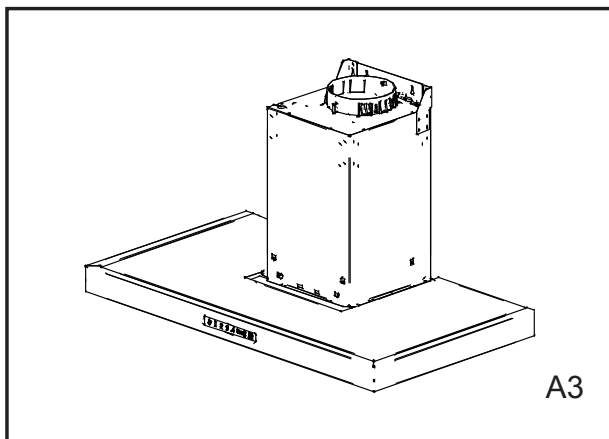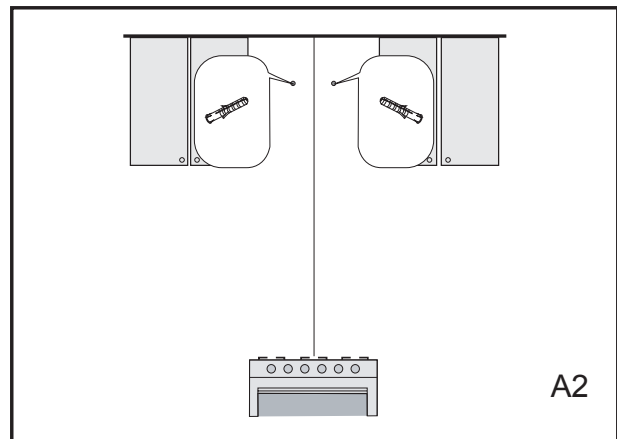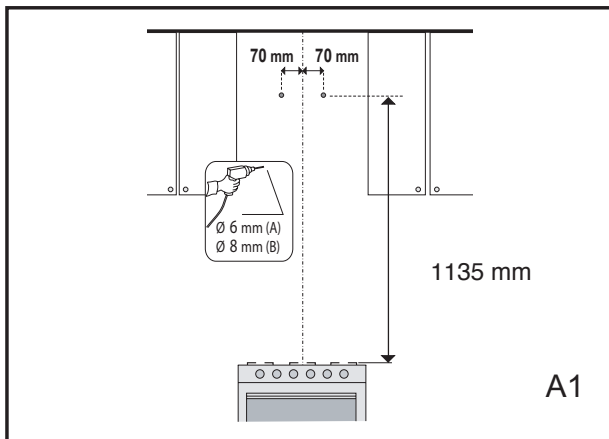

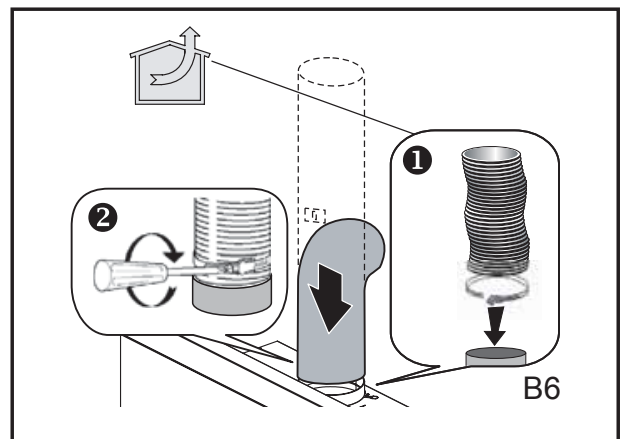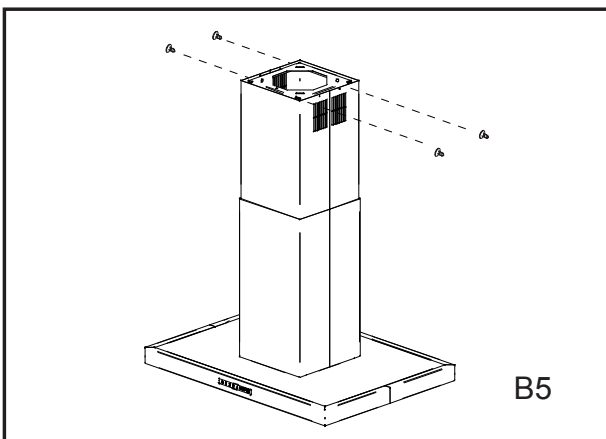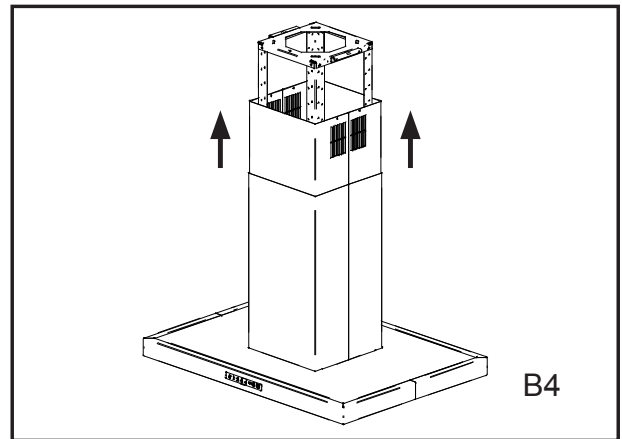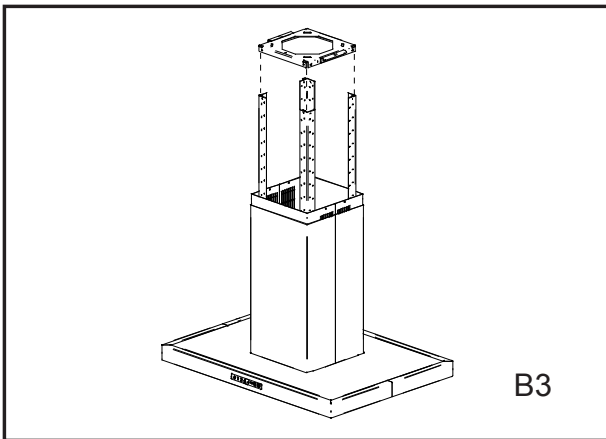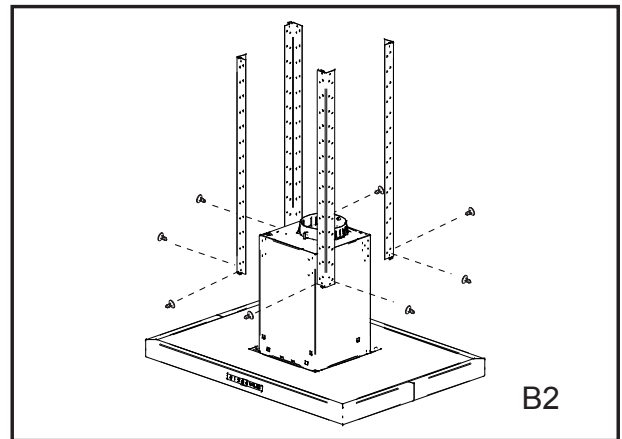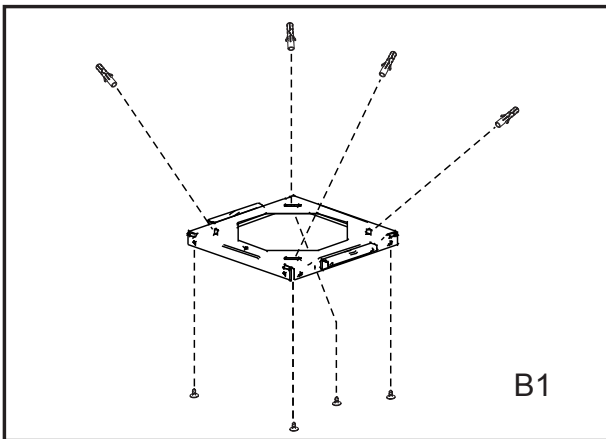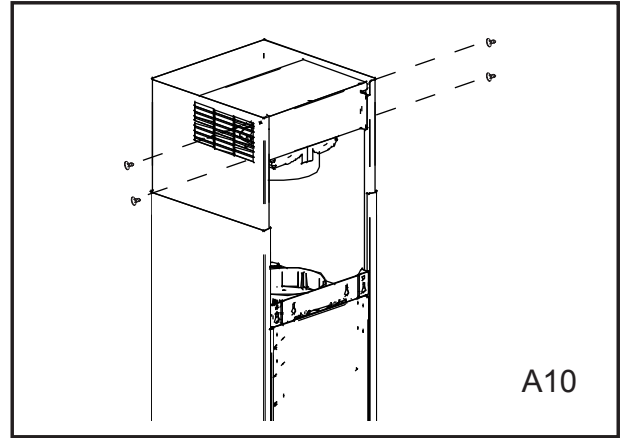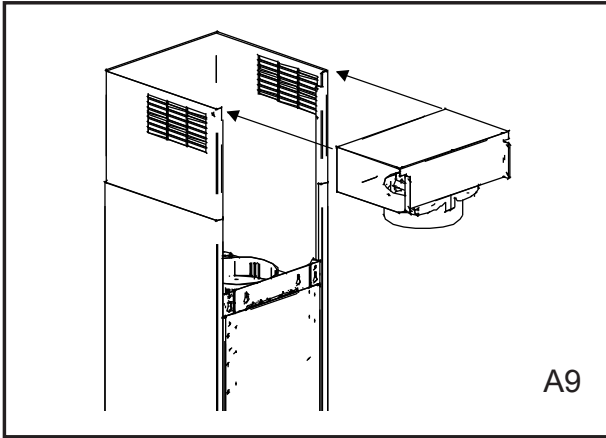



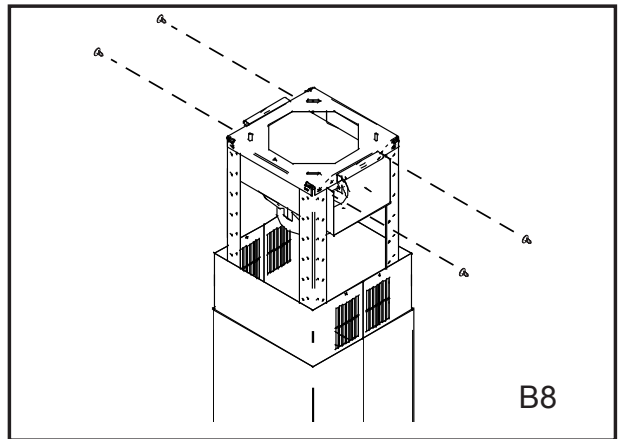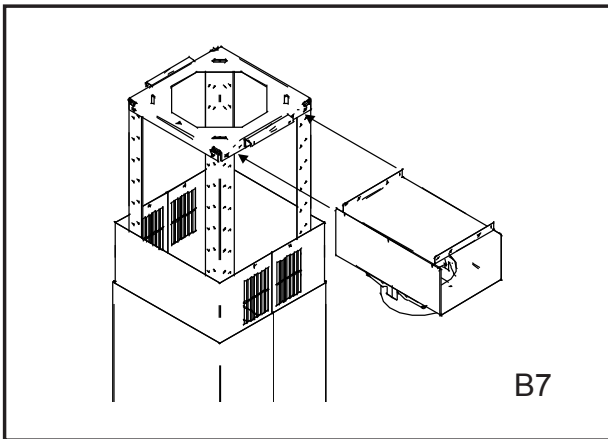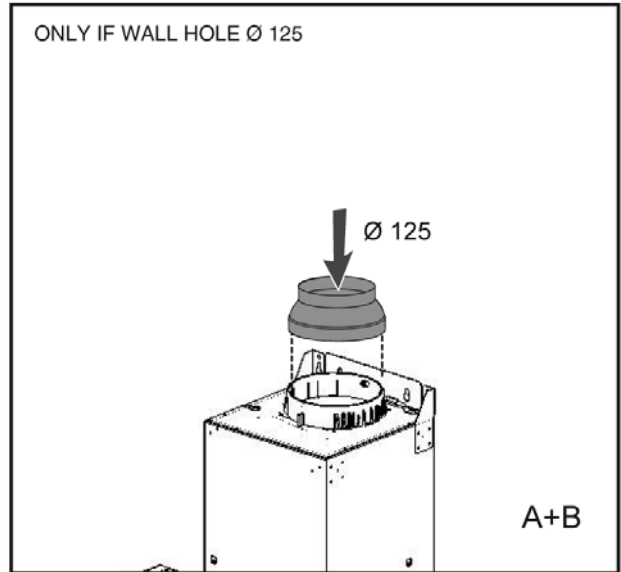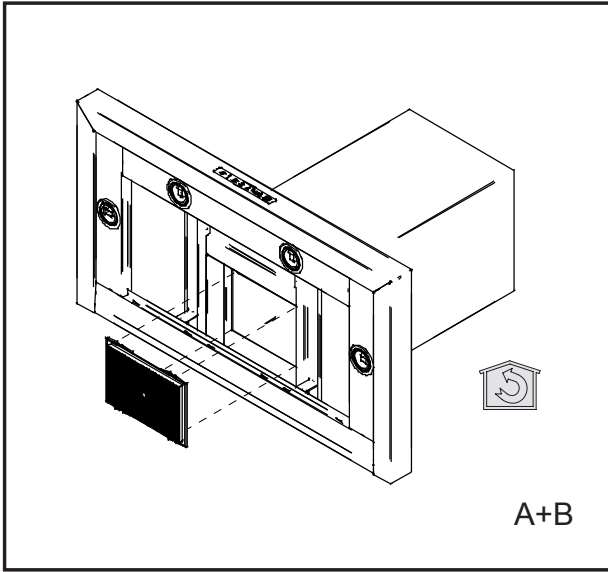

**Dear Customer,**

we would like to thank you and congratulate you on your choice.

This new product has been carefully designed and built using top quality materials, and meticulously tested to ensure that it meets all your culinary requirements.

Please read and observe these simple instructions, which will enable you to achieve excellent results from the very first time you use it. This state-of-the-art appliance comes to you with our very best wishes.

**THE MANUFACTURER**

**THIS PRODUCT IS DESIGNED FOR DOMESTIC USE.**

**THE MANUFACTURER DECLINES ALL RESPONSIBILITY FOR DAMAGES TO THINGS OR PEOPLE DERIVING FROM INCORRECT INSTALLATION OR IMPROPER, ERRONEOUS OR UNSUITABLE USE.**

**THE APPLIANCE MUST NOT BE USED BY PEOPLE (INCLUDING CHILDREN) WITH PHYSICAL, SENSORIAL OR MENTAL IMPAIRMENTS, OR BY PEOPLE WITHOUT THE NECESSARY EXPERIENCE**

**OR KNOWLEDGE, UNLESS THEY ARE SUPERVISED OR INSTRUCTED IN THE USE OF THE APPLIANCE BY A PERSON RESPONSIBLE FOR THEIR SAFETY.**

**CHILDREN MUST BE SUPERVISED TO ENSURE THAT THEY DO NOT PLAY WITH THE APPLIANCE.**

The hood may be installed in the filtering or in the ducting version.


**Exhausting version** (Fig.1) the hood aspirates the kitchen air saturated with fumes and odours, purifies it through the grease filters and expels it through an outlet pipe. With this version the charcoal filters are not required.

**Filtering version** (Fig.1A) the hood aspirates the kitchen air saturated with fumes and odours, purifies it through the grease filters and the charcoal filters and returns clean air into the room.

The charcoal filters are not supplied.

**Decide from beginning on the type of installation.**

 
**For greater efficiency, we recommend to install the hood in exhausting version.**

 Use gloves during installation and maintenance operations.

In case of exhausting version it is important :

- to prepare the hole and the duct of 150 mm.diameter
- to use a duct with the minimal indispensable length
- to use a duct with few curves as possible (max curve angle 90°)
- to avoid to use flat ducts or with different sections
- to use a duct with the smoother surface inside and of a certified material
- don't connect the hood to fumes exhaust ducts (fireplaces, boilers, stoves,...)
- the air can not be evacuated into a wall hole, if this hole is not dedicated to this purpose
- to equip the room of air intakes in order to not create air depression (it must not exceed the 0,04 mbar)

## CONTROLS

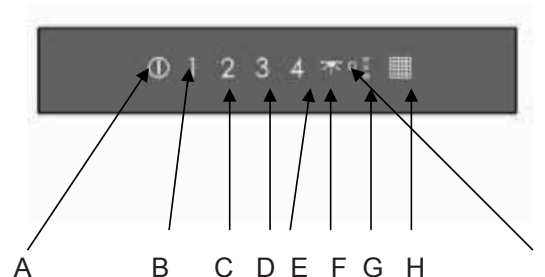

**A) ON/ OFF motor** (it switches the hood on the second speed)

**B) 1st motor speed**

**C) 2nd motor speed**

**D) 3rd motor speed**

**E) 4th motor speed**

**F) ON/OFF lamps:** if pressed long, it permits to select 3 different levels. Last selected level will remain in memory when the cooker hood restarts.

**G) TIMER:** it permits to select 3 several ranges(10', 15', 20' minutes)

**H) \*Filter alarm**

**I) Remote control signal receiver**

### **\*Filter alarm:**

the first operation once you have connected the cooker hood to the power, is to set it into exhausting or recycling mode. Proceed as follows:

once the cooker is connected all the keys will light for some seconds: press the key on/off for around 8 seconds until that the key H is not lighted. Press the key B if you want the cooker hood to work in exhausting mode (in this way the charcoal filter counter is not working because it is not required); the red key H is blinking and you can confirm pressing it.

To set the cooker hood into recycling mode (grease filters and charcoal filters counter) you must press the key C after the 8 seconds and the key H will be lighted red fix; pressing on it you can confirm. After 30 hours working, the key H will light fix: this means that it is time to clean the grease filters. After 140 hours working the key H will blink

red: this means that the grease filters must be cleaned and the charcoal filters replaced. To reset, press the key H longer for second 7-8.

Note well: it is not possible to reset partially the counter times until the system doesn't show one of the alarms. This means that intermediate resets are not possible.

## REMOTE CONTROL FUNCTIONS



- A) ON/OFF motor (it switches the hood on the second speed)
- B) It decreases the motor's speed
- C) It increases the motor's speed
- D) ON/OFF lamps (it is possible to set the lamps intensity only manually on the hood)

## MAINTENANCE

**⚠ Before cleaning and maintenance operations, would you please disconnect the power.**

### Cooker hood cleaning:

the cooker hood must be cleaned at least each 2 months in order to prevent the fire's risk; to clean the hood externally, a soft cloth moistened with warm water and neutral soap must be used for the painted cooker hoods and specific cleaning products for the stainless steel cooker hoods.

To clean the cooker hood internally, use a cloth with denatured alcohol.

Do not use abrasive or corrosive products!

### Grease filters cleaning(for exhausting and filtering executions)

Clean the grease filters at least each 2 months in order to prevent the fire's risk and anyway according the use of the appliance.

To remove the grease filters push on the filter's handle.

 
Wash them hand or in the dishwasher by using a neutral soap. Please take also into consideration that the dishwasher wash can alter the grease filter's colour but not its features.

### Charcoal filters replacement (in case of filtering execution):

The charcoal filters must be replaced at least each 6 months in order to prevent fire's risk and anyway according the use of the appliance.

### How to replace the charcoal filters :

Insert the charcoal filter in the special slots and then clip it (as shown in the picture)

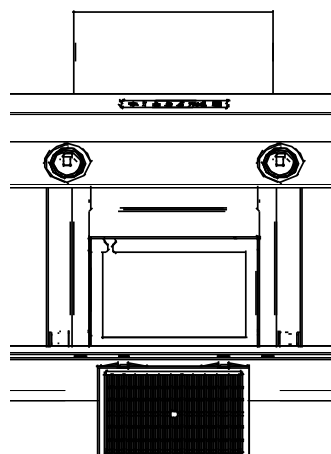

### **Lamps replacement:**



Remove the lamp glass gently with a screwdriver. Replace with a lamp of the same type. Do not touch the new lamp with bare hand.



Don't touch the lamps if they are still hot!

### **MALFUNCTION**

Before contacting the Technical Service, please verify these simple cases:

#### **Why the cooker hood is not working?**

- is there power cut?
- Is the cooker hood switched off?
- Is the plug disconnected or damaged?

#### **Why the cooker hood is inefficient?**

- is the cooker hood working at the suitable speed to remove the quantity of the fumes and vapours?
- Is the kitchen room enough ventilated to permit an adequate air intake?
- Must the grease filters be cleaned?
- Must the charcoal filters be replaced?(in case of filtering cooker hood)
- After 10 minutes continuous working at the 4th speed, the cooker hood goes automatically to the 2nd speed (normal working speed)

#### **Why the cooker hood switched off while is working?**

- Is there a sudden power cut?
- Is the plug disconnected or damaged?
- After 5 hours continuous working the cooker hood turns off automatically(energy saving).

# Warranty and Service

---

## **Domestic Warranty – Full two year warranty**

In addition to all statutory rights which you, the Purchaser, have under relevant laws in respect of this appliance, during the first two years of ownership as the original purchaser of this Kleenmaid appliance, Compass Capital Services trading as Kleenmaid guarantee that any fault caused by defective material or workmanship becoming apparent will be rectified free of charge with reference to parts and labour, provided that all service is performed during normal working hours by Kleenmaid or their designated Agents. Where the appliance is installed outside the normal servicing area of the above, the Purchaser must pay for the cost of transporting the appliance to and from the Agent or the Agent's travel cost to and from the purchaser's home.

## **Commercial Warranty – One year warranty**

When this appliance is installed in a commercial application, in addition to all statutory rights which you, the Purchaser, have under relevant laws in respect of this appliance, during the first one year of ownership as the original purchaser of this Kleenmaid appliance, Compass Capital Services trading as Kleenmaid guarantee that any fault caused by defective material or workmanship becoming apparent will be rectified free of charge with reference to parts and labour, provided that all service is performed during normal working hours by Kleenmaid or their designated Agents. Where the appliance is installed outside the normal servicing area of the above, the Purchaser must pay for the cost of transporting the appliance to and from the Agent or the Agent's travel cost to and from the purchaser's home.

## **What these warranties do not cover**

Compass Capital Services trading as Kleenmaid is not responsible for any damage or malfunction unless caused by a defect in material or workmanship. This includes but is not limited to abuse, misuse, improper installation and transportation damage. Compass Capital Services trading as Kleenmaid is not responsible for consequential damages from any malfunction.

This warranty does not cover consumable items, replacement of light globes or glass breakage due to impact. In case of fractured glass do not use your appliance.

## **Purchaser's responsibility**

The Purchaser must make the appliance available for servicing and shall bear any costs incurred for any de-installation and/or re-installation required to make the appliance available for servicing. Compass Capital Services trading as Kleenmaid is not liable for any consequential damage incurred during de-installation or re-installation.

## **Warranty registration and Proof of Purchase.**

Please complete warranty details below and retain together with your proof of purchase document.

When requesting service under this warranty the Purchaser agrees that Proof of Purchase of their Kleenmaid appliance will be necessary in order to make the warranty valid. Inability to provide Proof of Purchase even though this warranty is in place will not bind Compass Capital Services trading as Kleenmaid to repair the appliance at no charge under this warranty and will require the Purchaser to pay for the service costs in full.

**Model Number**

**Date of purchase**

**For service assistance visit**

[www.kleenmaid-appliances.com.au](http://www.kleenmaid-appliances.com.au)



## Other products available in the Kleenmaid range of appliances

---

- | Washing machines
- | Clothes dryers
- | Dishwashers
- | Ovens
- | Cooktops
- | Steam ovens
- | Microwave ovens
- | Built in espresso coffee machines
- | Rangehoods
- | Freestanding ranges
- | Sinks
- | Taps

Compass Capital Services Pty Limited  
trading as Kleenmaid  
ABN 96138214525

Level 29, Chifley Tower,  
2 Chifley Square,  
Sydney NSW, 2000

E: [help@kmaid.com.au](mailto:help@kmaid.com.au)  
[www.kleenmaid-appliances.com.au](http://www.kleenmaid-appliances.com.au)

