

RANGEHOOD

c o l l e c t i o n

Instructions for Use and Warranty Details


Rangehoods RH10 - Canopy 1000mm

Rangehoods RH11 - Canopy 900mm



KLEENMAID
THE WORLD'S BEST







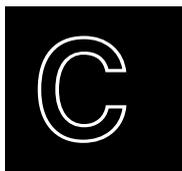


Congratulations on the purchase of your new appliance. This appliance has been designed and manufactured to give you years of reliable performance. For best results, carefully read the instructions on how to install your new appliance. Correct installation will avoid delays and unnecessary service calls.

Once installation is complete, read this booklet carefully and get to know the controls and the features of your new appliance.




We reserve the right to alter the specifications with no influence on the operation of the appliance. This instruction manual cannot be reason for a claim.

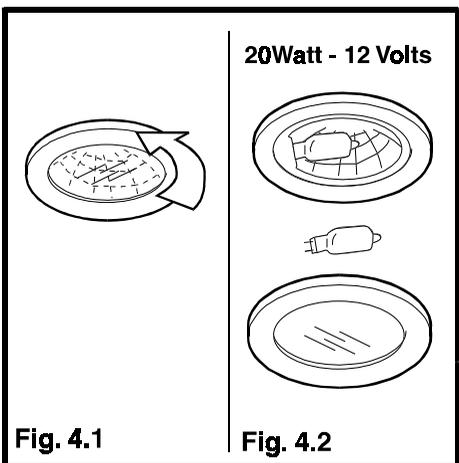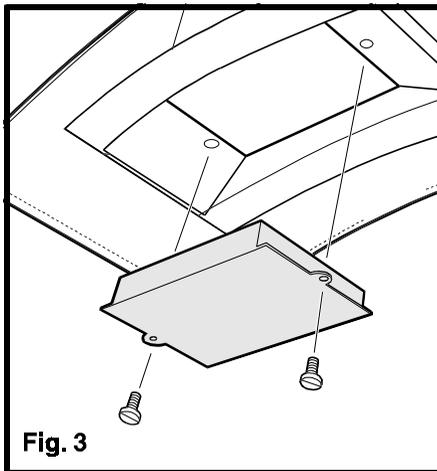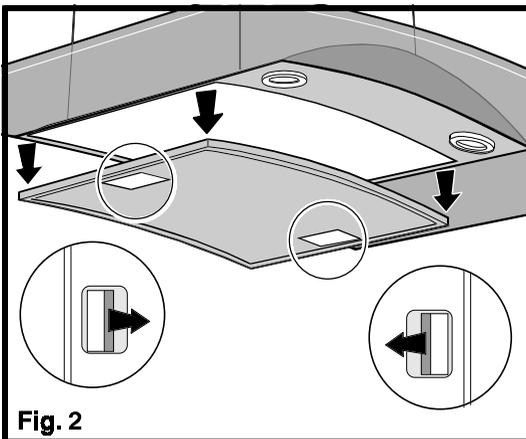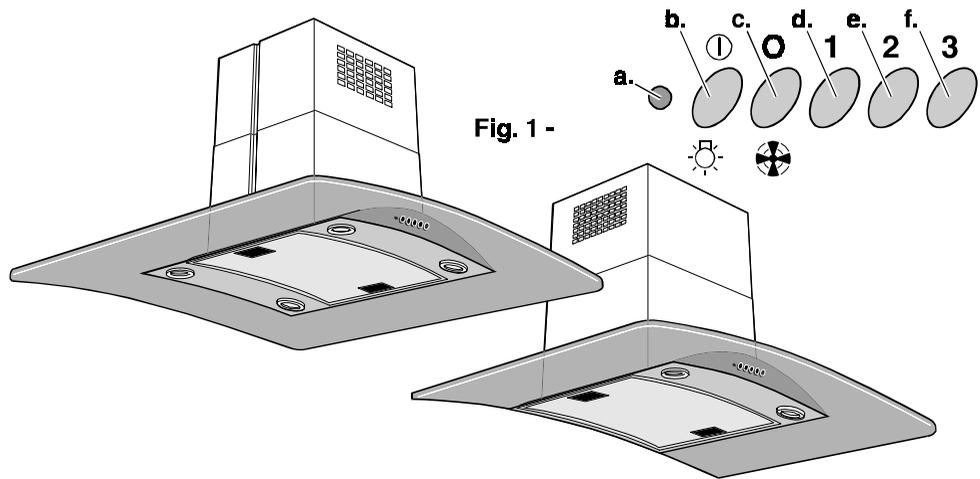

Mounting the hood - Wall model

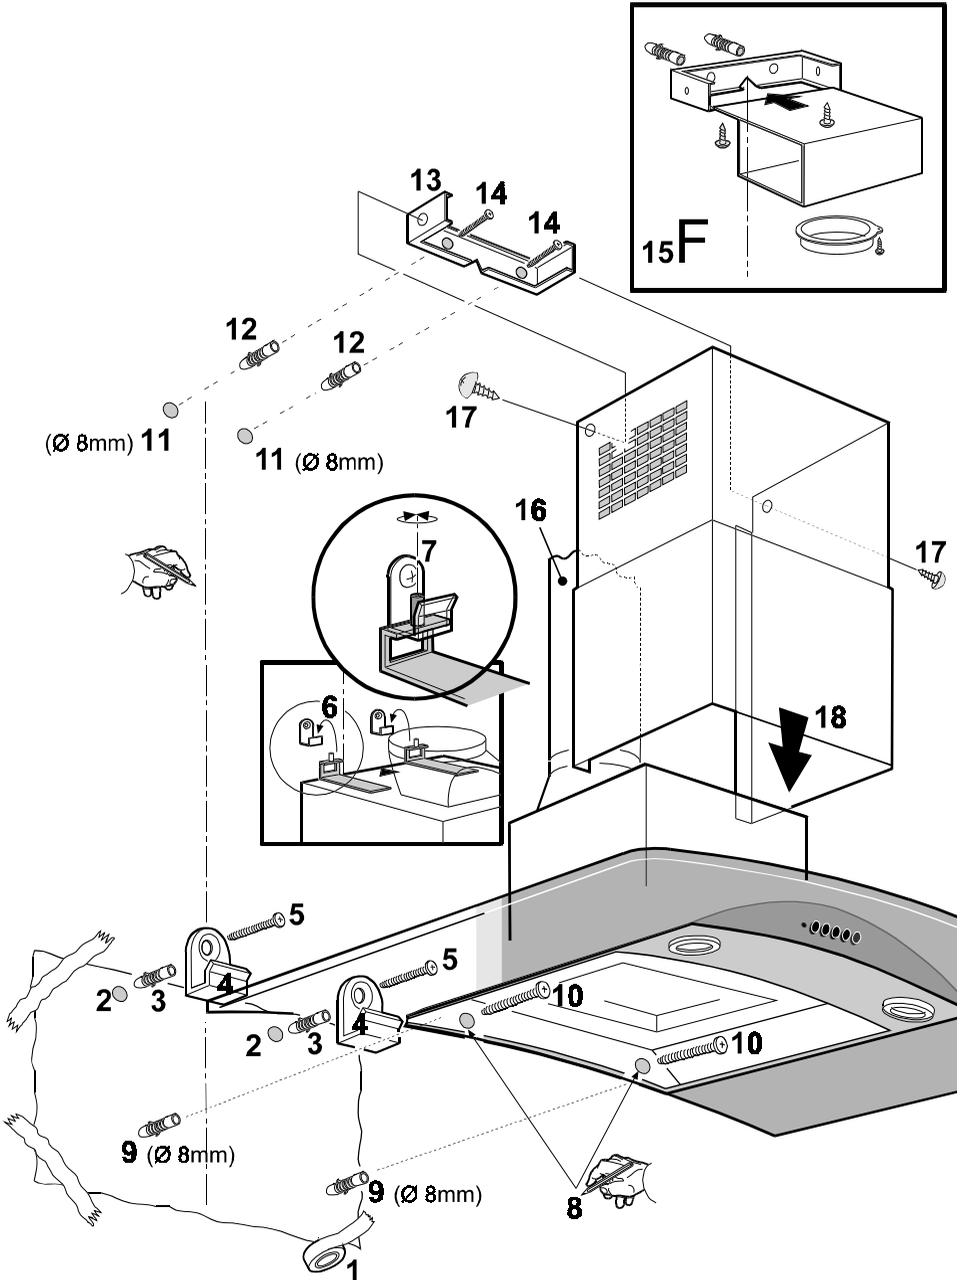

Mounting the hood - Ceiling model

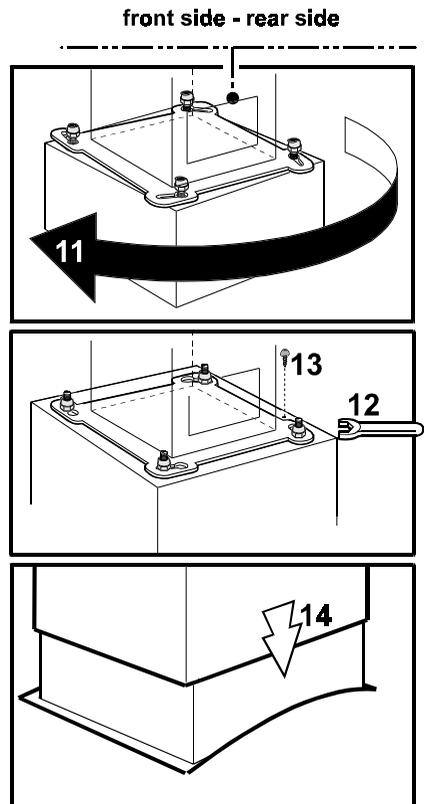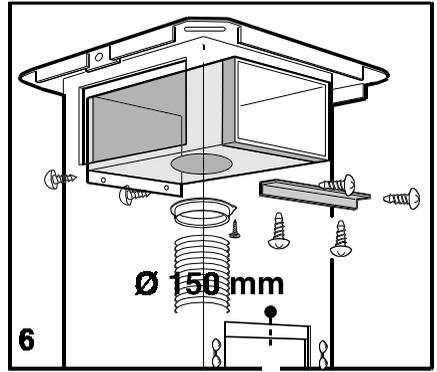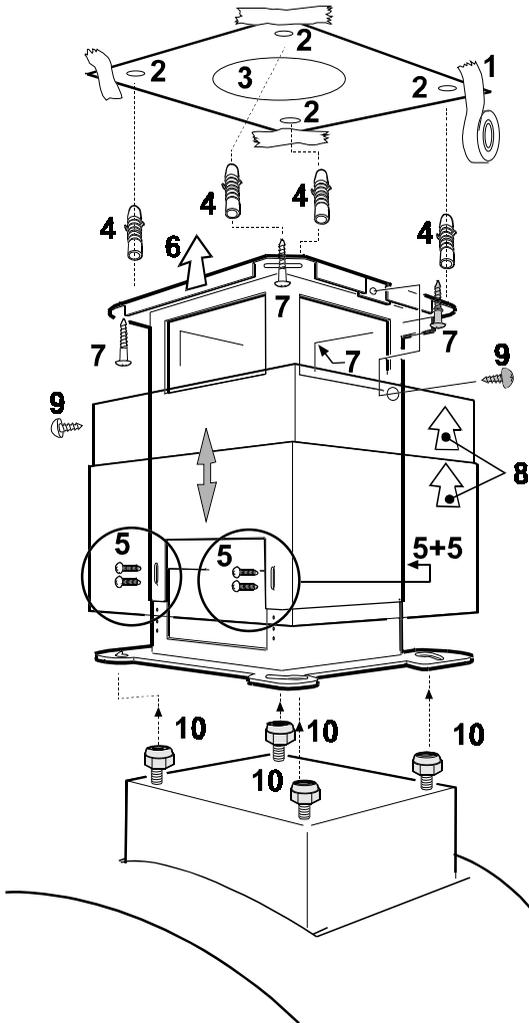

Control panel - Fig. 1 -

- a. "ON" indicator light
- b. Light ON-OFF button
- c. Motor OFF button
- d. e. f. Motor speed buttons
speed 1 (d.), speed 2 (e.), speed 3 (f.)

Use of the hood

It is advisable to switch on the extractor hood a few minutes before starting cooking and then to leave it running for approximately 5 minutes afterwards to ensure that all odours are extracted.

Maintenance

Before performing any maintenance operation, isolate the hood from the electrical supply by switching off at the connector and removing the connector fuse.

Or if the appliance has been connected through a plug and socket, then the plug must be removed from the socket.

Metal grease filter

The metal grease filter lasts forever and must be washed either by hand or in the dishwasher (**65°C**) with suitable detergents. The grease filters must be washed at least once a month.

Let the filter dry without damaging it before putting it back into place.

To remove the metal grease filter - Fig. 2:

1. Disconnect the hood from the electricity.
2. **a** - push toward the centre
b - pull the filters downwards.

Carry out the above steps in reverse order to put the filters back after having washed them.

Carbon filter

("recirculation mode only", see next pages)
The carbon filter cannot be washed nor regenerated.

The carbon filter should be replaced every 6 months under normal use.

To fit the carbon filter - Fig. 3:

1. Disconnect the hood from the electricity.
2. Remove the metal filters.
3. Fit the carbon filter and fix it to the body of the hood with two supplied screws
4. Put the metal filter back into place.

To replace the carbon filter - Fig. 3:

1. Disconnect the hood from the electricity.
2. Remove the metal filters.
3. Remove the old carbon filter and replace it.
4. Put the metal filter back into place.

Cleaning

To clean the outside of the hood use a cloth moistened with denatured alcohol or neutral liquid detergents. Never use products containing abrasive.

Wipe brushed stainless steel in the same direction as the brushing to avoid scratching.

Attention

Failure to observe the instructions for cleaning the appliance and changing and cleaning the filters may cause fires.

Therefore, we recommend observing these instructions.

Replacing the lamp - Fig. 4

1. Disconnect the hood from the electricity.
2. Unscrew the lamp cover.
3. Replace the damaged lamp with a new halogen lamp of 20Watt max.
4. Screw the lamp cover on its proper place. Before calling for repair service because the hood fails to light up, make sure the lamps are well inserted.

Warning!

- The hood cannot be connected to flues of other appliances that run on energy sources other than electricity.
- When the hood is used at the same time of other appliances that run on energy sources other than electricity, provision must be made for an adequate supply of air.
- No food must be cooked flambé underneath the hood.
The use of an unprotected flame is dangerous for the filters and could cause fires.
Therefore, never use an open flame under the hood. When frying foods, never leave the pan alone because the cooking oil could flare up.
- Please, keep to the provisions of official directives regarding the question of fume discharge.
- The manufacturers refuse to accept any responsibility for damage to the hood or its catching on fire because of failure to observe the above instructions.

Installation

These minimum distances between hobs and grease filter **must** be observed:

Minimum 600 mm - electric hobs

Minimum 700 mm - gas or mixed hobs

Electric connection

Before completing any connection, make sure the house voltage corresponds with the voltage indicated on the label affixed inside the hood

It is advisable to call a qualified technician to make the electrical connection.

Appliance fitted with plug.

Connect it to a socket which conforms with current regulations.

If you intend to connect it directly to the electric mains, remove the plug and fit an approved bipolar switch with a minimum contact opening of no less than 3mm.

If the plug is not accessible once it has been inserted in the socket, it will however be

necessary to fit an approved bipolar switch with a minimum contact opening of no less than 3mm.

Appliance without plug

Fit an approved plug or an approved bipolar switch with a minimum contact opening of not less than 3mm.

The manufacturers are not liable for any problems caused by the user's failure to observe the above instructions.

Systems available

Two systems are available:

Exhaust mode

Vapours are extracted outside through an exhausting pipe that is affixed to the connection ring above the hood.

Diameter of the exhausting pipe must be equal to that of the connection ring.

Attention!

If the hood is supplied with carbon filter, then it must be removed.

Recirculation mode

The air is filtered through a carbon filter and recirculated into the room through the grid on the higher part of the chimney.

Attention!

If the hood is not supplied with carbon filter, then it must be ordered and mounted.

WARRANTY AND SERVICE

DOMESTIC WARRANTY - FULL FIVE YEAR WARRANTY

In addition to all statutory rights which you, the Consumer, have under the relevant laws in respect of this appliance, during the first five years of ownership as the original purchaser of this Kleenmaid appliance, we guarantee that any fault caused by faulty material or workmanship becoming apparent will be rectified free of charge for parts and labour, provided that all service is performed during normal working hours by Kleenmaid or their designated Agents. Where the appliance is installed outside the normal servicing area of the above, the Purchaser must pay for the cost of transporting the appliance to and from the Agent or the Agent's travelling cost to and from the Purchaser's home.

COMMERCIAL WARRANTY - ONE YEAR WARRANTY

When this appliance is installed in a commercial application, you, the Consumer, have under the relevant laws in respect of this appliance, during your first one year of ownership as the original purchaser of this Kleenmaid appliance, we guarantee that any fault caused by faulty material or workmanship becoming apparent, will be rectified free of charge for parts and labour, provided that all service is performed during normal working hours by Kleenmaid or their designated Agents. Where the appliance is installed outside the normal servicing area of the above, the Purchaser must pay for the cost of transporting the appliance to and from the Agent or the Agent's travelling cost to and from the Purchaser's home.

WHAT THESE WARRANTIES DO NOT COVER

We are not responsible for any damage or malfunction unless caused by a defect in material or workmanship. This includes but is not limited to abuse, misuse, improper installation and transportation damage. We are not responsible for any consequential damages from any malfunction.

WARRANTY DOES NOT COVER REPLACEMENT OF LIGHT GLOBES OR GLASS BREAKAGE DUE TO IMPACT

In case of fractured glass do not use your appliance.

WARRANTY REGISTRATION

Please complete the enclosed warranty card and retain it together with your proof of purchase document. These documents will need to be viewed by our Service Representative should you request in warranty service.

SERVICE ASSISTANCE

To assist you when phoning our After Sales Service number to arrange a service call please complete the following details and have them ready when you call.

Model Number _____ Date of purchase _____

Kleenmaid Store purchased from _____ Date of installation _____

KLEENMAID AFTER SALES SERVICE

1300 652 100

Other products in Kleenmaid's
range of world's best appliances:

Washers

Dryers

Dishwashers

Ovens

Cooktops

Rangehoods

Sinks

Waste Disposals

Taps

Cookware

Refrigerators

Freezers

Vacuum Cleaners

For sales information on the full range of quality
kitchen and laundry appliances, phone **13 13 08**